

2013 Monarch RT3 Relay Service Manual



SRAM LLC WARRANTY

EXTENT OF LIMITED WARRANTY

Except as otherwise set forth herein, SRAM warrants its products to be free from defects in materials or workmanship for a period of two years after original purchase. This warranty only applies to the original owner and is not transferable. Claims under this warranty must be made through the retailer where the bicycle or the SRAM component was purchased. Original proof of purchase is required. **Except as described herein, SRAM makes no other warranties, guaranties, or representations of any type (express or implied), and all warranties (including any implied warranties of reasonable care, merchantability, or fitness for a particular purpose) are hereby disclaimed.**

LOCAL LAW

This warranty statement gives the customer specific legal rights. The customer may also have other rights which vary from state to state (USA), from province to province (Canada), and from country to country elsewhere in the world.

To the extent that this warranty statement is inconsistent with the local law, this warranty shall be deemed modified to be consistent with such law, under such local law, certain disclaimers and limitations of this warranty statement may apply to the customer. For example, some states in the United States of America, as well as some governments outside of the United States (including provinces in Canada) may:

- a. Preclude the disclaimers and limitations of this warranty statement from limiting the statutory rights of the consumer (e.g. United Kingdom).
- b. Otherwise restrict the ability of a manufacturer to enforce such disclaimers or limitations.

For Australian customers:

This SRAM limited warranty is provided in Australia by SRAM LLC, 133 North Kingsbury, 4th floor, Chicago, Illinois, 60642, USA. To make a warranty claim please contact the retailer from whom you purchased this SRAM product. Alternatively, you may make a claim by contacting SRAM Australia, 6 Marco Court, Rowville 3178, Australia. For valid claims SRAM will, at its option, either repair or replace your SRAM product. Any expenses incurred in making the warranty claim are your responsibility. The benefits given by this warranty are additional to other rights and remedies that you may have under laws relating to our products. Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

LIMITATIONS OF LIABILITY

To the extent allowed by local law, except for the obligations specifically set forth in this warranty statement, in no event shall SRAM or its third party suppliers be liable for direct, indirect, special, incidental, or consequential damages.

LIMITATIONS OF WARRANTY

This warranty does not apply to products that have been incorrectly installed and/or adjusted according to the respective SRAM user manual. The SRAM user manuals can be found online at sram.com, rockshox.com, avidbike.com, truvativ.com, or zipp.com.

This warranty does not apply to damage to the product caused by a crash, impact, abuse of the product, non-compliance with manufacturers specifications of usage or any other circumstances in which the product has been subjected to forces or loads beyond its design.

This warranty does not apply when the product has been modified, including, but not limited to any attempt to open or repair any electronic and electronic related components, including the motor, controller, battery packs, wiring harnesses, switches, and chargers.

This warranty does not apply when the serial number or production code has been deliberately altered, defaced or removed.

This warranty does not apply to normal wear and tear. Wear and tear parts are subject to damage as a result of normal use, failure to service according to SRAM recommendations and/or riding or installation in conditions or applications other than recommended.

Wear and tear parts are identified as:

- | | | | |
|---|--|--------------------------|----------------------|
| • Dust seals | • Stripped threads/bolts (aluminium, titanium, magnesium or steel) | • Handlebar grips | • Transmission gears |
| • Bushings | • Brake sleeves | • Shifter grips | • Spokes |
| • Air sealing o-rings | • Brake pads | • Jockey wheels | • Free hubs |
| • Glide rings | • Chains | • Disc brake rotors | • Aero bar pads |
| • Rubber moving parts | • Sprockets | • Wheel braking surfaces | • Corrosion |
| • Foam rings | • Cassettes | • Bottomout pads | • Tools |
| • Rear shock mounting hardware and main seals | • Shifter and brake cables (inner and outer) | • Bearings | • Motors |
| • Upper tubes (stanchions) | | • Bearing races | • Batteries |
| | | • Pawls | |

Notwithstanding anything else set forth herein, the battery pack and charger warranty does not include damage from power surges, use of improper charger, improper maintenance, or such other misuse.

This warranty shall not cover damages caused by the use of parts of different manufacturers.

This warranty shall not cover damages caused by the use of parts that are not compatible, suitable and/or authorised by SRAM for use with SRAM components.

This warranty shall not cover damages resulting from commercial (rental) use.

Table of Contents

Exploded View - Monarch RT3 Relay Rear Shock 4

RockShox Suspension Service 5

Mounting Hardware and Bushing Service..... 5

 Parts and Tools for Mounting and Bushing Service5

 Mounting Hardware Removal5

 Eyelet Bushing Replacement.....7

 Mounting Hardware Installation..... 9

Monarch RT3 Relay Service 11

 Parts and Tools Needed for Service 11

 Air Can Removal.....12

 Air Can Service14

 Motor Removal.....18

 Damper Body Service19

 Piston Service.....21

 IFP and Damper Body Service27

 Shock Assembly and Bleed.....29

 Motor Installation32


 Air Can Installation33



SAFETY FIRST!

We care about YOU. Please, always wear your safety glasses and protective gloves when servicing RockShox products.
Protect yourself! Wear your safety gear!

Exploded View - Monarch RT3 Relay Rear Shock

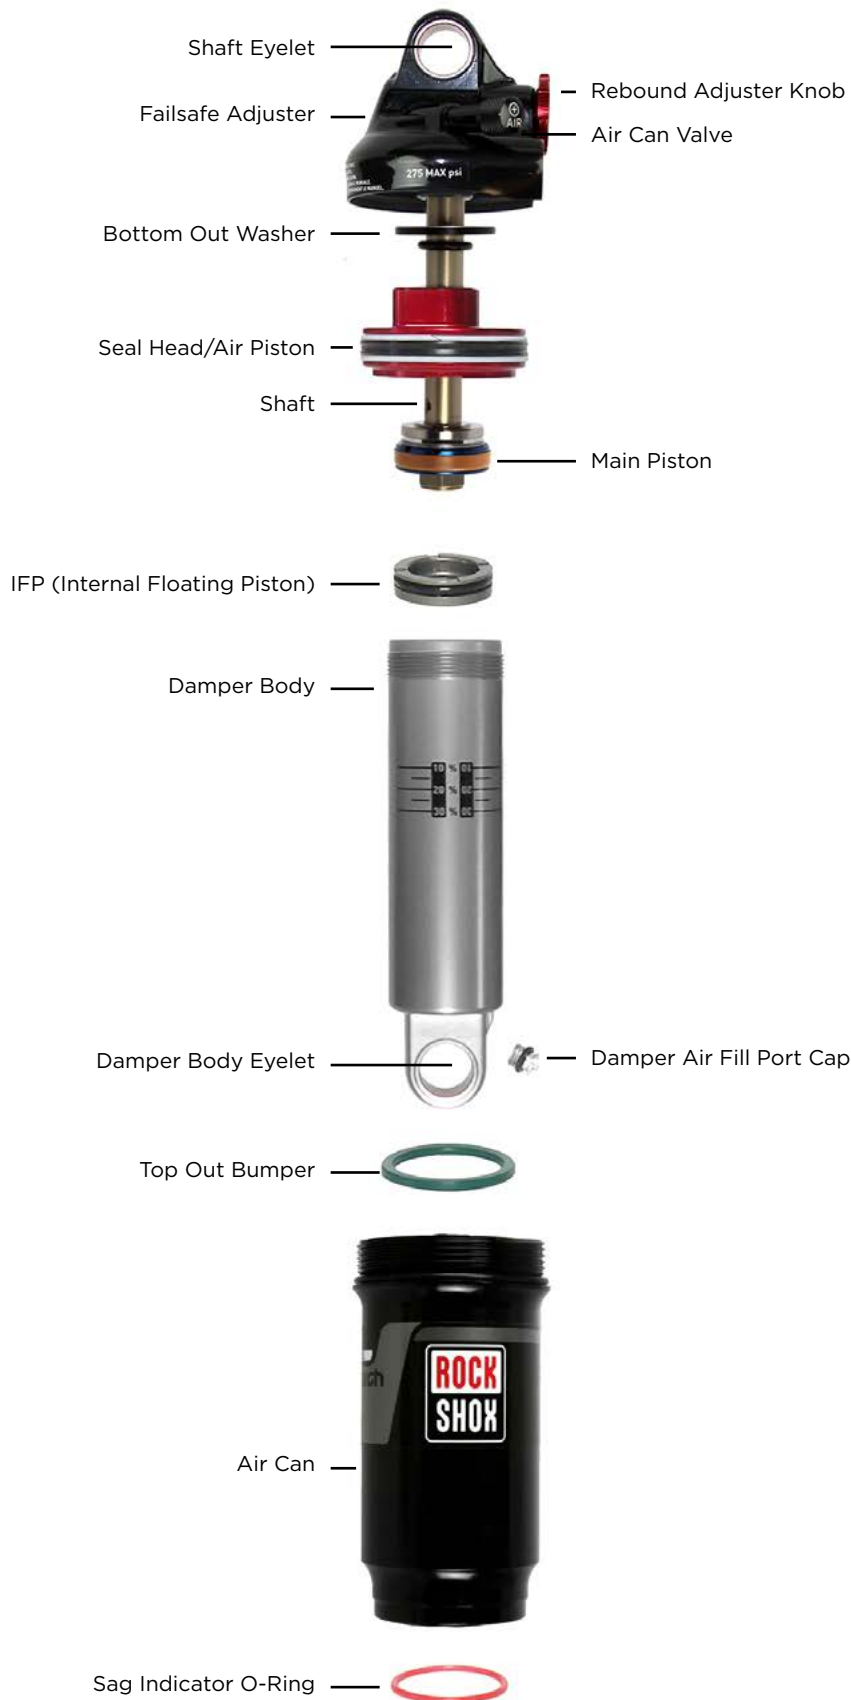

RockShox Suspension Service

We recommend that you have your RockShox suspension serviced by a qualified bicycle mechanic. Servicing RockShox suspension requires knowledge of suspension components as well as the special tools and fluids used for service.

For exploded diagram and part number information, please refer to the [Spare Parts Catalog](#) available on our web site at sram.com/service. For order information, please contact your local SRAM distributor or dealer.

Information contained in this publication is subject to change at any time without prior notice. For the latest technical information, please visit our website at sram.com/service.

Your product's appearance may differ from the pictures/diagrams contained in this publication.

Mounting Hardware and Bushing Service

Prior to servicing the rear shock, remove it from the bicycle frame according to the bicycle manufacturer's instructions. Once the shock is removed from the bicycle, remove the mounting hardware before performing any service.

NOTICE

Use aluminum soft jaws to prevent damage to the rear shock eyelets when clamping into a bench vise.

Parts and Tools for Mounting and Bushing Service


- Safety glasses
- Nitrile gloves
- Apron
- Clean, lint-free rags
- Suspension specific grease
- Bench vise with aluminum soft jaws
- RockShox rear shock bushing removal/installation tool
- 13 mm open end wrench
- Adjustable wrench

Mounting Hardware Removal

Some mounting hardware is easily removed using only your fingers. Try to remove the end spacers with your fingernail, then push the bushing pin out of the bushing. If this works, move on to the next section, [Eyelet Bushing Replacement](#).

If you are unable to remove the mounting hardware using your fingers, use the RockShox rear shock bushing removal/installation tool.

Images in the following steps are of Monarch RL, but are applicable to Monarch RT3 Relay.

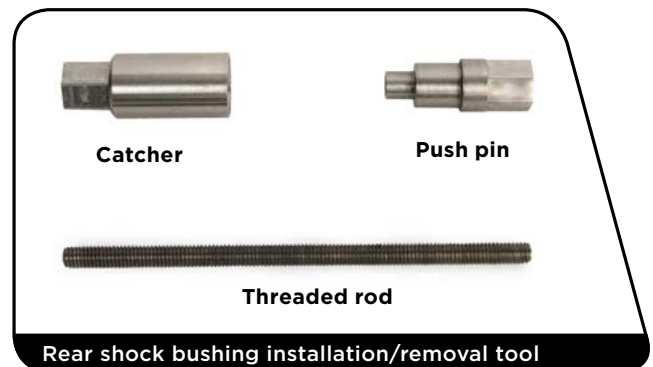

- 1** Thread the small end of the push pin onto the threaded rod until the rod is flush or slightly protrudes from the hex-shaped end of the push pin.



- 2** Insert the threaded rod through the shaft eyelet until the push pin rests against the bushing pin.


Thread the large, open end of the catcher along the rod until it rests on the end spacer.



- 3** Clamp the catcher in a bench vise or hold it secure with a 13 mm open end or adjustable wrench.

Use a second 13 mm wrench to thread the push pin along the rod until it stops against the end spacer.

Unthread the push pin from the threaded rod and remove the end spacer from that side.

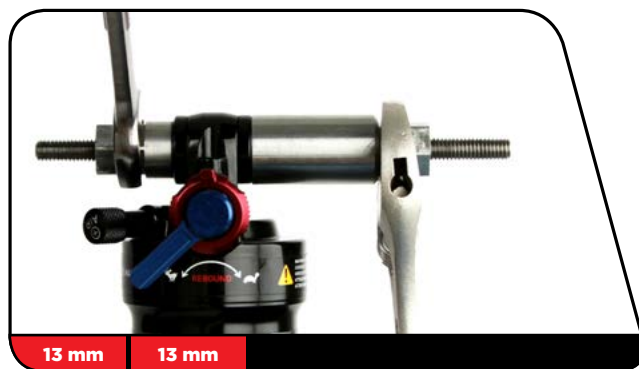

- 4** Reinsert the threaded rod and push pin through the shaft eyelet. Thread the large, open end of the catcher along the rod until it rests against the shaft eyelet.

Use a 13 mm wrench to thread the push pin along the rod until it stops against the end spacer.



- 5** Unthread the catcher from the threaded rod.
Remove the end spacer and bushing pin from the tool.
Set the mounting hardware aside until you have finished servicing your shock.
Repeat for the damper eyelet.



Eyelet Bushing Replacement

To replace damaged or worn out bushings, use the RockShox rear shock bushing removal/installation tool.

- 1** Insert the threaded rod through the shaft eyelet until the base of the push pin rests against the bushing.
Thread the large, open end of the catcher onto the rod until it rests on the eyelet.



- 2** Clamp the catcher in a bench vise or hold it secure with a 13 mm wrench.

Use a second 13 mm wrench to thread the push pin along the rod until the push pin pushes the eyelet bushing out of the eyelet.



- 3** Unthread the catcher from the threaded rod. Remove the tool from the shaft eyelet and discard the old bushing.

Repeat for the other eyelet.

- 4** Apply a small amount of grease to the outside of the new bushing.



- 5** Position the shaft eyelet and eyelet bushing between the soft jaws of a bench vise. Slowly turn the bench vise handle to begin pressing the eyelet bushing into the shaft eyelet.

Check the alignment of the bushing as it enters the eyelet. If the bushing starts to enter the eyelet at an angle, remove the bushing from the eyelet, regrease the bushing, and repeat this step until the bushing enters the eyelet straight.

NOTICE

To prevent damage to the shock use aluminum vise soft jaws and position the eyelet in the vise so that the adjustment knobs are clear of the vise jaws.



- 6** Continue to press the eyelet bushing until it is seated in the shaft eyelet.

Remove the shock from the bench vise and repeat the installation process for the other bushing and eyelet.



Mounting Hardware Installation

Some mounting hardware is easily installed using only your fingers. Press the bushing pin into the shock eyelet bushing until the pin protrudes from both sides of the eyelet an equal amount. Next, press an end spacer, large diameter side first, onto each end of the bushing pin. If this works, you have completed mounting hardware and bushing service.

If you are unable to install your mounting hardware using your fingers, use the RockShox rear shock bushing removal/installation tool.

- 1** Thread the small end of the push pin onto the threaded rod until the push pin is flush or slightly protrudes from the hex-shaped end of the push pin.



- 2** Insert the threaded rod through the bushing pin then through the shaft eyelet so that the bushing pin is positioned between the push pin and the eyelet.



- 3** Thread the large, open end of the catcher onto the rod until it rests on the eyelet.



- 4** Clamp the catcher in a bench vise or hold it secure with a 13 mm wrench.

Use a second 13 mm wrench to thread the push pin along the rod until it pushes the bushing pin into the shock eyelet bushing.

Continue to thread the push pin until the bushing pin protrudes from both sides of the eyelet an equal amount.

You may need to unthread the catcher slightly to check the bushing pin spacing.



- 5** Unthread the catcher from the threaded rod and remove the tool from the shaft eyelet.

- 6** Position the end spacer with the large end facing the air can. Use your fingers to push the end spacer onto each end of the bushing pin.



Monarch RT3 Relay Service

Prior to servicing your rear shock, remove it from the bicycle frame according to the bicycle manufacturer's instructions. Once the shock is removed from the bicycle, remove the mounting hardware before performing any service (see the [Mounting Hardware And Bushing Service](#) section).

Parts and Tools Needed for Service

- Safety glasses
- Nitrile gloves
- Apron
- Clean, lint-free rags
- Oil pan
- Isopropyl alcohol
- RockShox 7wt suspension fluid
- Suspension specific grease
- Parker® O-Lube
- Maxima® Maxum4 Extra 15w50 lube
- Bench vise with aluminum soft jaws
- Pick
- Blue threadlock
- Metric caliper or small metric ruler
- RockShox rear shock body vise block
- RockShox rear shock vise block
- 12, 13, and 17 mm open end wrenches
- Torque wrench
- 13 and 17 mm crowfoot
- 12 mm socket
- 1.5, 2, and 2.5 mm hex wrenches
- 2.5 mm hex bit socket
- Schrader valve core tool
- Strap wrench
- Needle nose pliers
- Monarch air fill adapter
- Shock pump

SAFETY INSTRUCTIONS

Always wear safety glasses and nitrile gloves when working with suspension fluid.

Place an oil pan on the floor underneath the area where you will be working on the shock.

NOTICE

Do not scratch any sealing surfaces when servicing your suspension. Scratches can cause leaks.

When replacing o-rings, use your fingers or a pick to remove the o-ring. Clean the o-ring groove and apply grease to the new o-ring.

Your product's appearance may differ from the pictures/diagrams contained in this publication. Some images in the following steps are of Monarch RL, but are applicable to Monarch RT3 Relay.

Air Can Removal

- 1 To record your adjustment settings, turn the Rebound Adjuster Knob counter-clockwise (toward the rabbit) until it stops, while counting the number of detent clicks or turns. This will assist you with post-service set up.



- 2 Record your air pressure setting to assist with post-service set up. Remove the air valve cap by hand. Use a small hex wrench to depress the Schrader valve and release all air pressure from the air can. Use a Schrader valve tool to remove the valve core from the valve body.

⚠ CAUTION - EYE HAZARD

Do not disassemble a pressurized shock, this can cause suspension fluid or debris to forcefully eject from the shock. Wear safety glasses.



- 3 Use a Schrader valve tool to remove the damper air fill port cap. Use a small hex wrench or pick to depress the Schrader valve and release all air/nitrogen pressure from the damper.


Once the pressure has been released, depress the Schrader valve a second time. If the Schrader valve is able to move, the shock has been completely depressurized.

If the Schrader valve does not move at all, the shock is still pressurized and will need to be sent to an authorized RockShox service center for further service.

Use a Schrader valve tool to remove the valve core.

⚠ CAUTION - EYE HAZARD

Verify all pressure is removed from the shock before proceeding. Failure to do so can cause the damper body to separate from the shaft eyelet at a high velocity. Wear safety glasses.

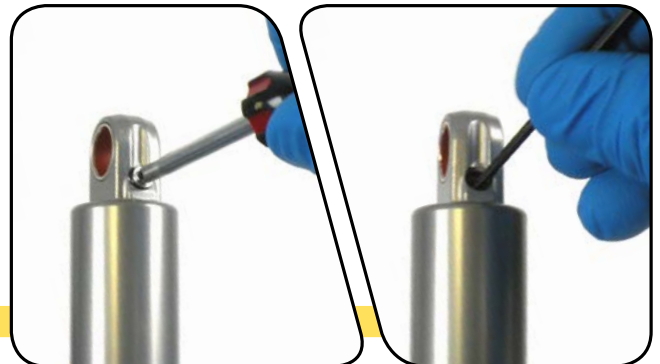

- 4** Clamp the shaft eyelet into a bench vise, with the shock positioned horizontally.

NOTICE

To prevent damage to the shock use aluminum soft jaws and position the eyelet in the bench vise so that the adjustment knobs are clear of the bench vise jaws.



- 5** If the shock is collapsed so that a minimal amount of damper body is visible, there is still air pressure in the air can. Insert a rag through the damper body eyelet. This will prevent the air can from forcefully ejecting from the shock upon disassembly.

CAUTION - EYE HAZARD

Disassembly of a pressurized air can may cause suspension fluid or debris to forcefully eject from the shock. Wear safety glasses.



- 6** Use a strap wrench to remove the air can. Wrap the strap around the section of the air can furthest from the shaft eyelet. Turn the wrench counter-clockwise to unthread the air can.

Once it is completely unthreaded, slowly pull the air can along the damper body to remove it.

Do not place the strap wrench on the air can decal.

For high volume air cans: Grip the lower portion of the can; otherwise, the high volume sleeve will rotate independent of the air can.

Vacuum pressure will increase as you pull the air can along the damper body, then suddenly release as the end of the can comes over the damper body eyelet.



NOTICE

Do not scratch any sealing surfaces when servicing your suspension. Scratches can cause leaks. When replacing seals and o-rings, use your fingers or a pick to remove the seal or o-ring. Clean the groove and apply grease to the new seal or o-ring.

- 1** Use a pick to pierce and remove the air can dust wiper seal located in the top groove, paying attention to the orientation for reinstallation.

Use a pick to pierce and remove the quad seal located between the two backup rings in the second deepest groove.



- 2** Use a pick to remove the two backup rings from the second deepest groove inside the air can.




- 3** Spray isopropyl alcohol inside the air can and clean it with a rag. Remove a glove and use your finger to inspect the inside and outside of the air can for scratches, dents, or other surface deformations. Replace the air can if it is scratched or damaged.

All air cans have a small dimple, as seen from the exterior of the can, that you should feel during inspection. This is normal.

In addition, high volume air cans have a small port inside the high volume sleeve that you should feel. This is normal.



- 4** Install the first backup ring by inserting one end into the air can, then push the remainder of the ring into the can, so that it rests on the bottom of the second deepest groove.

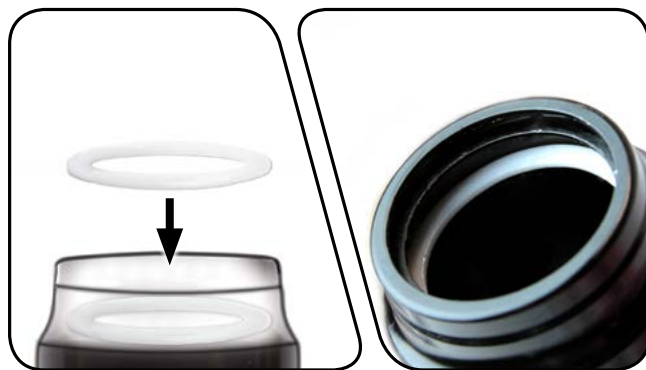

- 5** Apply a small amount of Parker® O-Lube to the new quad seal and install it above the backup ring in the second deepest groove.



- 6** Install the second backup ring by inserting one end into the air can, then push the remainder of the ring into the can, so that it rests on the quad seal at the top of the second deepest groove.



- 7** Orient the new dust wiper seal step side up. Install it into the dust wiper seal groove at the top of the air can.



8 Spray isopropyl alcohol on the air can threads and eyelet body threads and clean them with a rag.

9 Apply a small amount of Parker® O-Lube to the quad seal, backup rings, and dust wiper seal.
Set the air can aside.



10 For High Volume Air Cans Only:

Remove the retention o-ring from the high volume sleeve.

Firmly grip the high volume sleeve and slide it off of the air can.

Use your fingers to remove the high volume sleeve o-rings. Clean the seal glands, apply Parker® O-Lube to the new seals, then reinstall them.

Spray isopropyl alcohol inside the high volume sleeve and clean it with a rag.

Evenly spread just enough Parker O-Lube to make the inside of the sleeve slippery. This stops the o-rings from rolling as the sleeve slides over them.

Slide the sleeve onto the air can.

Reinstall the high volume sleeve retention o-ring into the groove outside of the air can.



Motor Removal


- 1 Use a 2 mm hex wrench to turn the Failsafe Adjuster counter-clockwise until it stops in the open compression position.

NOTICE

To avoid damage to the motor, it is important the motor is removed and installed using the same compression setting.



- 2 Use a 2.5 mm hex wrench to remove the two motor retention bolts. Remove the motor and set aside from the shock.

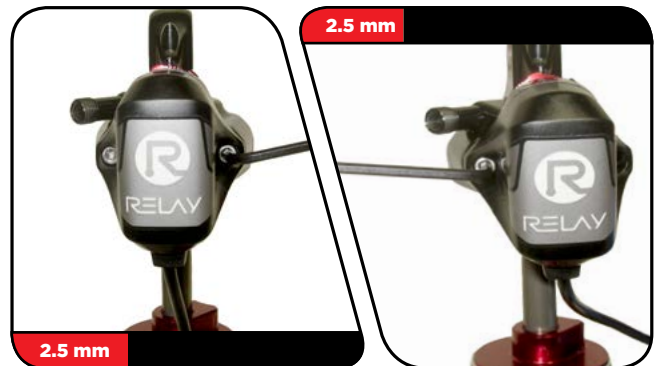

Damper Body Service

Your product's appearance may differ from the pictures/diagrams contained in this publication. Some images in the following steps are of Monarch RL, but are applicable to Monarch RT3 Relay.

- 1 Remove and replace the top out bumper on the damper body.



- 2 Remove the shock from the bench vise. Turn the shock over and clamp the damper eyelet into the bench vise, so the shock is vertical.

NOTICE

Use aluminum soft jaws to protect the shock eyelet when clamped.



- 3 Use a 2 mm hex wrench to remove the bleed screw, located in the seal head/air piston.



- 4** Use a 17 mm open end wrench to loosen the seal head/air piston assembly from the damper body. Use your hand to remove the assembly.

Fluid will spill from the assembly.



- 5** Remove the damper body from the bench vise and pour the fluid into an oil pan.




Piston Service

For a complete list of available Monarch piston tunes, refer to the most current RockShox spare parts catalog on www.sram.com/service.


- 1 Spray isopropyl alcohol on the shaft assembly and shaft clamp, and clean them with a rag.

- 2 Hold the shaft eyelet with one hand, and push the seal head/air piston toward the shaft eyelet with your other hand.

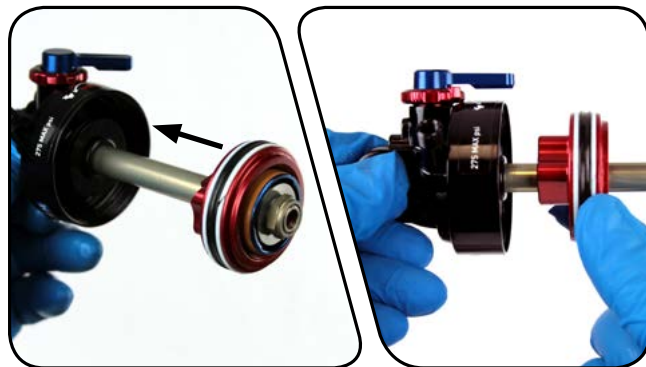


- 3 Use the RockShox Rear Shock Vise Block to clamp the seal head/air piston into a bench vise with the main piston positioned vertically.


Do not remove the shaft from the eyelet.

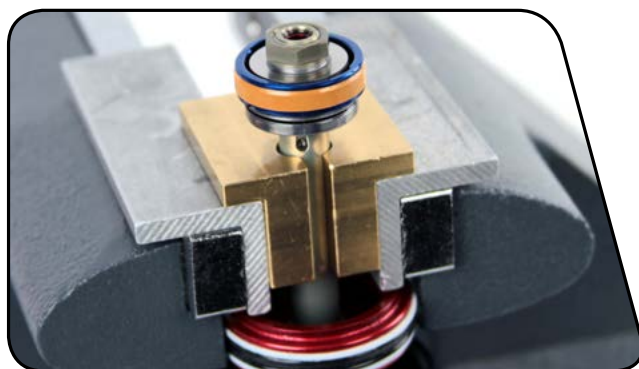

- 4 Use a 12 mm wrench to remove the piston nut.

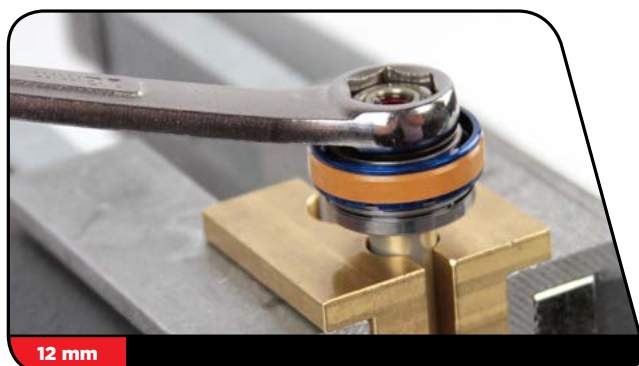


- 5** Use a small TORX® wrench or pick to slide the main assembly off the shaft and onto the tool.
Keep all the parts together and set aside.

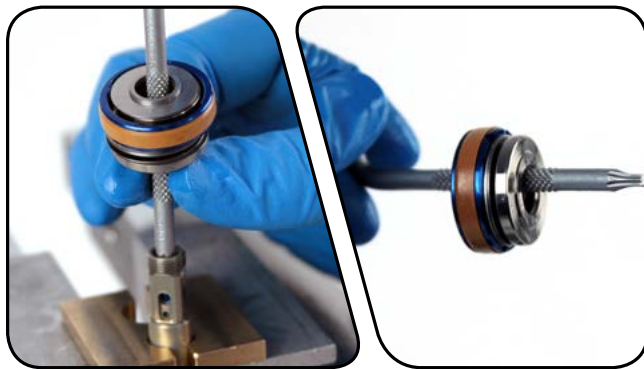


NOTICE

Do not scratch any sealing surfaces when servicing your suspension. Scratches can cause leaks. When replacing seals and o-rings, use your fingers or a pick to remove the seal or o-ring. Clean the groove and apply grease to the new seal or o-ring.


- 6** Use your fingers to remove and replace the seal head/air piston seal and glide rings.

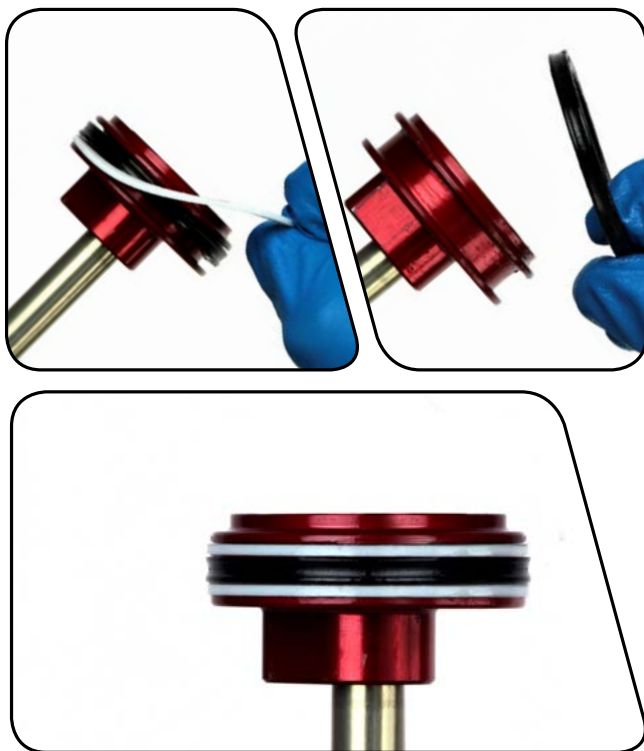

- 7** Remove the seal head/air piston from the damper shaft.

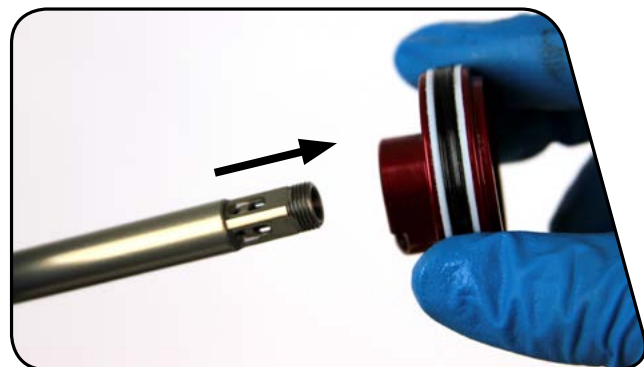

- 8** Use a pick to remove and replace the o-ring located in the interior of the seal head.

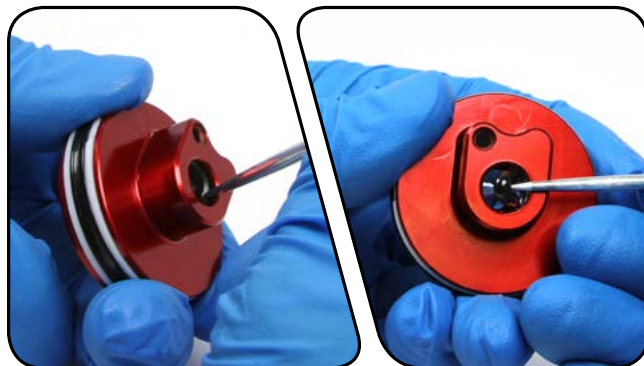

- 9** Use a pick to remove and replace the inner o-ring, located at the base of the threads in the seal head/air piston.




- 10** Use a pick or 1.5 mm hex wrench to push and remove the compression ball out of the backside of the seal head through the bleed port.

Do not replace the compression ball at this time, you will do that later.

Do not reuse the compression ball.




- 11** Remove the bottom out washer and o-ring from the shaft.
Replace the bottom out washer so the metal side is oriented toward the shaft eyelet. Slide the new o-ring on the shaft so that it rests on top of the plastic side of the bottom out washer.

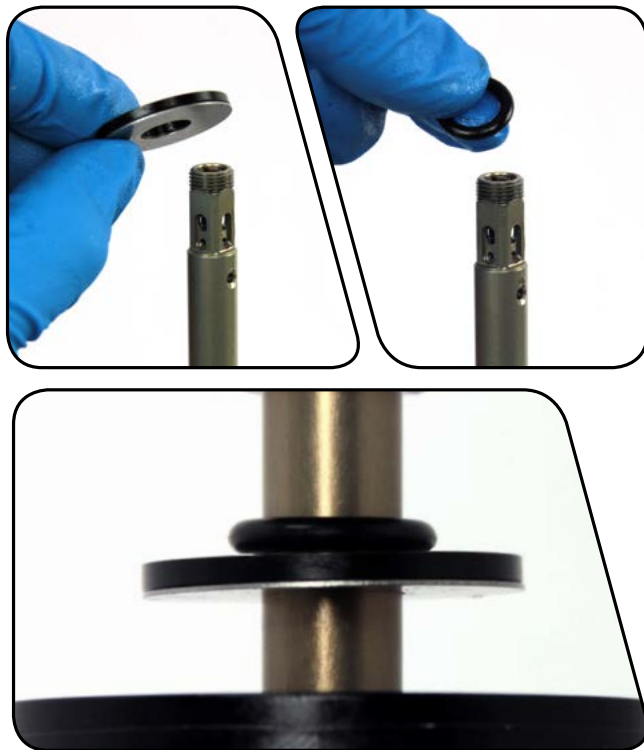


- 12** Use your fingers to remove and replace the o-ring located in the interior of the shaft eyelet threads.



- 13** Reinstall the seal head/air piston onto the damper shaft.

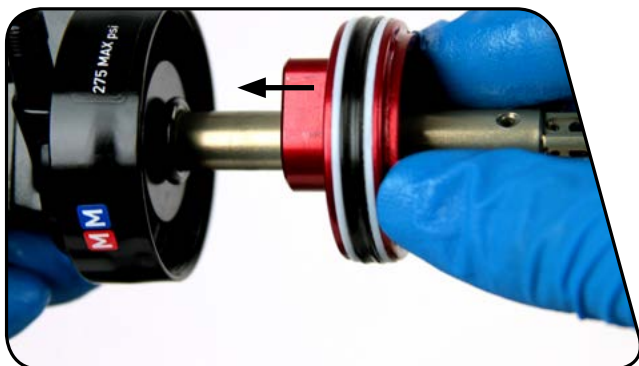

- 14** Use the RockShox Rear Shock Vise Block to clamp the seal head/air piston into a bench vise with the eyelet positioned vertically.

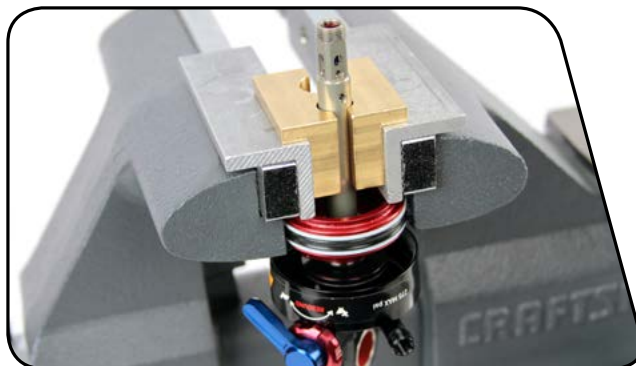



- 15** Use a small TORX® wrench or pick to reinstall the shim stack on the main piston. Use your fingers to squeeze the shims and center the shim stack.

Slide the main piston and the remaining shims onto the shaft. Use a small pick to center the shim stack along the inside edge of the main piston.


If desired, install a new piston tune. Refer to the most current RockShox spare parts catalog on www.sram.com/service.

NOTICE

If shims are not centered, the shock will not perform properly.

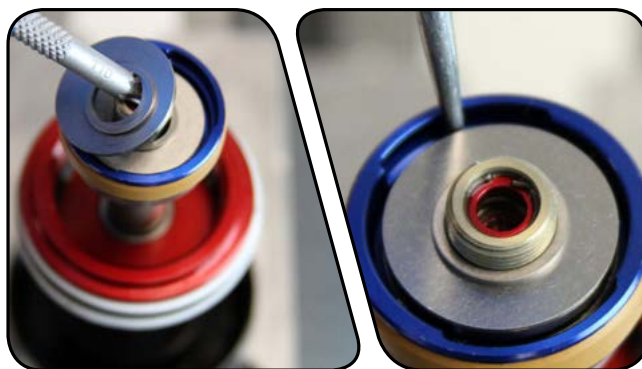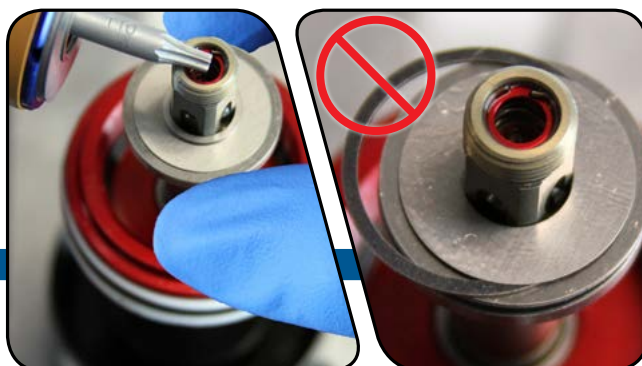

- 16** Use your fingers to thread the nut onto the damper shaft.
Use a torque wrench with a 12 mm socket to tighten it to 4.5 N·m (40 in-lb).

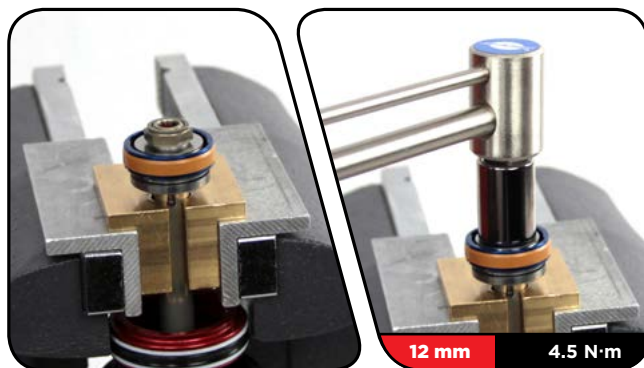

- 17** Remove the shaft assembly from the bench vise and set it aside.


IFP and Damper Body Service

- 1** Use a Schrader valve core tool to install the new Schrader valve into the damper body air fill port.




- 2** Wrap a rag around the end of the damper body. Thread a shock pump with the Monarch air fill adapter installed onto it into the air fill port.

Pump air into the damper body to force the IFP out of the damper body, into the rag.

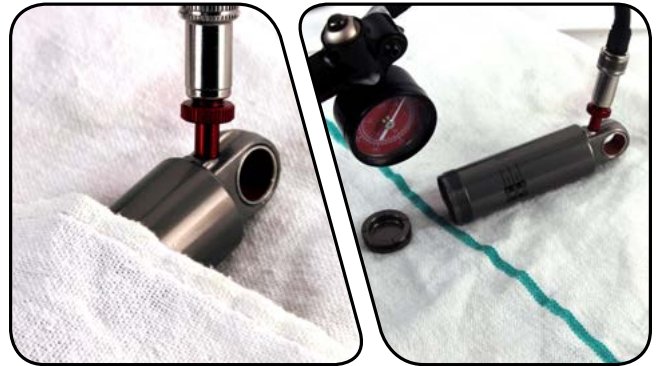

- 3** Spray isopropyl alcohol on the inside and outside of the damper body and clean it with a rag.

Remove a glove and use your finger to inspect the inside and outside of the damper body for scratches, dents, or other surface deformations. If any deformations are found, the damper body will need to be replaced.

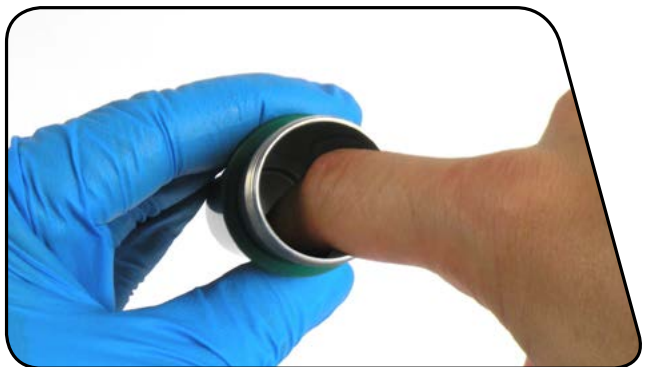


- 4** Remove the IFP o-ring. Spray isopropyl alcohol on the IFP o-ring and clean it with a rag.
Apply a small amount of grease to the new o-ring and install it.



- 5** Insert the IFP into the damper body with the stepped side visible.
Use a metric caliper or ruler to push the IFP to the depth specified in the table below.

Measure the IFP depth from the lowest part of the IFP.

Shock dimensions	IFP insertion depth
152x31	44.1 mm
165x38	49.4 mm
184x44	54.8 mm
190x51	60.2 mm
200x51	60.2 mm
200x57	65.6 mm
216x63	70.9 mm
222x66	73.1 mm

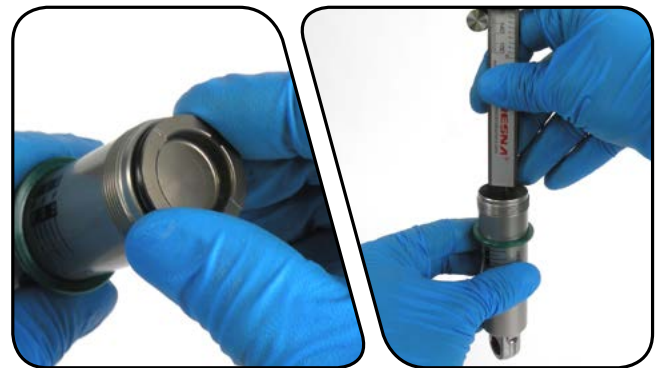

Shock Assembly and Bleed

- 1 Place the damper body into the RockShox Rear Shock Body Vise Block. Clamp into the bench vise so the damper body is positioned vertically.

Tighten the bench vise firmly enough so that the IFP cannot move in the damper body. Check this by using your finger to push on the IFP.


If the IFP does not move, the vise is tight enough. If it does move, remove the damper body from the vise, reset the IFP to the proper depth, then reinstall it into the vise block and tighten the bench vise firmly enough so that the IFP cannot move in the damper body.

Wrap a clean rag around the damper body.


Do not overtighten the bench vise so that the damper body gets crushed.

NOTICE

The RockShox Rear Shock Body Vise Block holds the IFP in place. Failure to use the vise block when clamping the damper body into the vise may result in improper IFP height. Improper IFP height can cause the damper to fail.

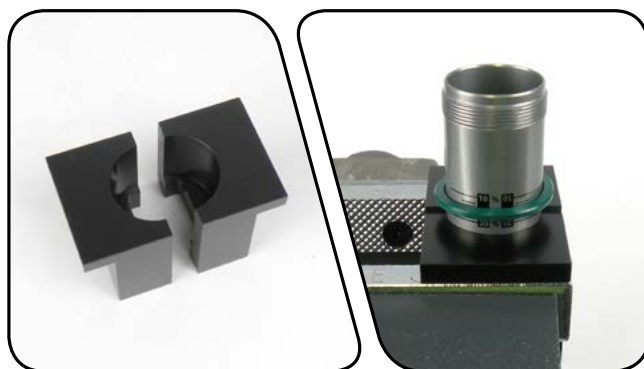

- 2 Pour new RockShox 7wt suspension fluid into the damper body until it is level with the top of the damper body. Use your finger to remove any bubbles from the surface of the fluid.

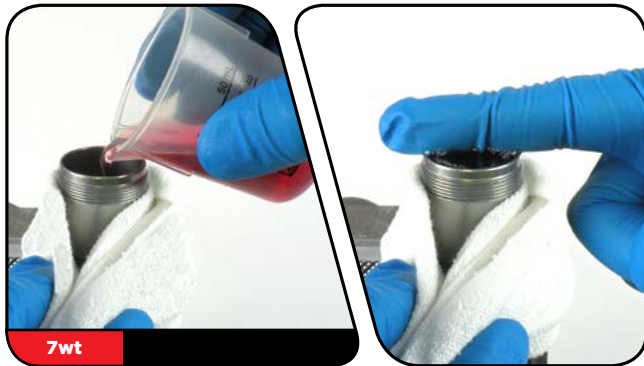

- 3 Check that the rebound adjuster is set to the minimum setting (toward the rabbit).

Slide the seal head/air piston until it stops at the end of the damper shaft.



4 Use your hand to install the seal head/air piston onto the damper body.

Do not hold on to the shaft eyelet or damper shaft while inserting. It will move the piston/shaft assembly, causing too much fluid to displace out of the damper body.

Check that the compression ball is removed from the seal head/air piston.

Fluid will be displaced out of the bleed port.



5 Use a torque wrench with 17 mm crow foot to tighten the seal head/air piston to 28 N·m (250 in-lb).

Install the crow foot onto the torque wrench at a 90° angle to the handle to ensure an accurate torque reading.



6 Allow air bubbles to escape from the bleed port in the seal head. Insert the new compression ball into the bleed port.



- 7** Use a 2 mm hex wrench to thread the bleed screw into the bleed port until you feel it touch the compression ball.
Tighten the bleed screw an additional ½ turn.

NOTICE

Tightening the bleed screw more than ½ turn can damage the compression ball.



- 8** Use a shock pump with the Monarch air fill adapter to pressurize the damper body to 350 psi (24.13 bar).

Once you have pressurized the shock, remove the Monarch air fill adapter from the air fill port before removing it from the shock pump. Separating the pump from the adapter first will allow all of the air to escape from the shock.

If you have the proper fill equipment, you may substitute air with nitrogen.



- 9** Use a Schrader valve tool to install the air fill port cap.



- 10** Remove the shock from the vise.
Spray the damper assembly with isopropyl alcohol and clean it with a rag.

Motor Installation

- 1 Use a 2 mm hex wrench to turn the Failsafe Adjuster screw counter-clockwise until it stops in the open compression position.

NOTICE

To avoid damage to the motor, it is important the motor and shock are oriented to the open position.



- 2 Use your fingers to rotate the motor cam so the red mark is positioned at the top, indicating the motor is in the open position.

NOTICE

To avoid damage to the motor, it is important the motor and shock are oriented to the open position.



- 3 Align the motor with the two bolt holes. Use a torque wrench with a 2.5 mm hex bit socket to install the two motor retention bolts to 1.2 N·m (11 in-lb).




Air Can Installation

- 1 Clamp the shaft eyelet into a bench vise, so the shock is horizontal.
Apply Parker® O-Lube to the seal head/air piston seals.
Ensure that the top out bumper is installed.

NOTICE

Use aluminum soft jaws to protect the shaft eyelet when clamped.

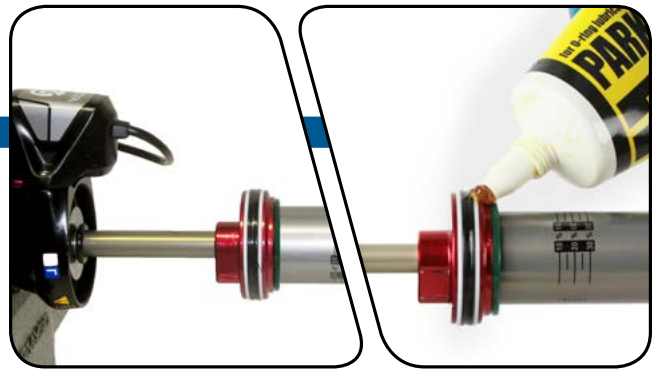

- 2 Apply a small amount of grease to the air can threads. Position the threaded side of the air can over the damper body eyelet.
Firmly press the air can onto the air piston and damper body until the air can is approximately 30 mm from the shaft eyelet threads.
Inject 0.3 mL of Maxima® Maxum4 Extra 15w 50 into the air can.



- 3 Continue to press the air can onto the damper body until the air can threads and shaft eyelet threads make contact. Thread the air can clockwise into the shaft eyelet. Hand-tighten the air can onto the shaft eyelet.

High volume air cans only: Grip the lower portion of the can; otherwise, the high volume sleeve will rotate independent of the air can preventing tightening of the air can.



- 4** Remove the shock from the bench vise. Turn it over and clamp the damper eyelet into the bench vise, so the shock is vertical.

Spray isopropyl alcohol on the outside of the air can and clean it with a rag.

NOTICE


Use aluminum soft jaws to protect the shaft eyelet when clamped.



- 5** Stabilize the air can with a strap wrench to prevent it from rotating. Use a torque wrench with a 13 mm crowfoot socket to tighten the air can to 4.5 N·m (40 in-lb).



- 6** Use a Schrader valve tool to install a new Schrader valve into the air can valve.

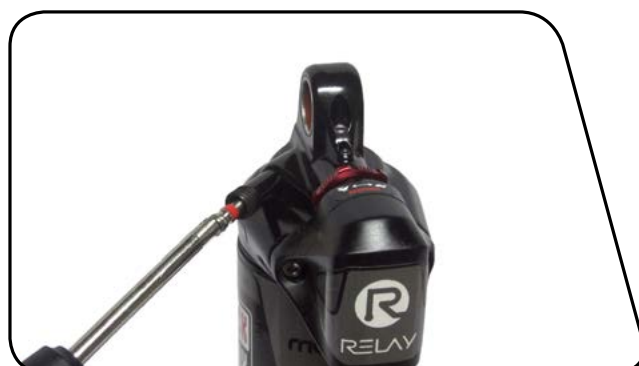

- 7** Use a shock pump to pressurize the shock to the desired air pressure, then install the valve cap.



- 8** Remove the shock from the bench vise. Spray isopropyl alcohol on the shock and clean it with a rag.

- 9** Install the sag indicator o-ring.



- 10** Reinstall the shock mounting hardware (see the [Mounting Hardware And Bushing Service](#) section).

This concludes the service for the Monarch RT3 Relay rear shock. Reinstall the shock to the bicycle frame according to the bicycle manufacturer's instructions.

www.sram.com