




# Bottomless Tokens™ 2018

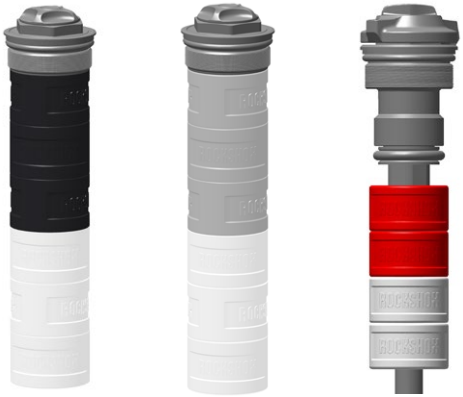

	Factory installed	Installation en usine	Instalado de fábrica
	Ab Werk installiert	Installato in fabbrica	工場出荷時取り付け済み
	Instalado de fábrica	In de fabriek geïnstalleerd	出厂安装
	Available	Disponibile	Disponível
	Erhältlich	Disponibile	追加可能分
	Disponibile	Beschikbaar	可提供

	32 mm Solo Air™
	35 mm Solo Air / DebonAir™
	35 mm Dual Position Air™
	Available
<b>B</b>	Boost
<b>DPA</b>	Dual Position Air

Bluto™			
	80 mm	100 mm	120 mm
26"			

BOXXER®	
	200 mm
26" 27.5"	

Lyrik DebonAir									
	150 mm	160 mm	170 mm	180 mm		150 mm	160 mm	170 mm	180 mm
27.5"B					29"B				

Lyrik™ DPA								
	150 mm	160 mm	170 mm	180 mm		160 mm	170 mm	180 mm
27.5"B					29"B			

PIKE® DebonAir									
	120 mm	130 mm	140 mm	150 mm	160 mm		120 mm	130 mm	140 mm
27.5"B						29"B			

PIKE DJ™			
	100 mm	110 mm	140 mm
26"			

PIKE DPA			
	150 mm	160 mm	140 mm
27.5"B			

# REBA®

	100 mm	120 mm	130 mm	140 mm	150 mm		80 mm	100 mm	120 mm	130 mm	140 mm	150 mm
27.5" 27.5"B						29" 29"B						
	3 Max	3 Max	3 Max	3 Max	3 Max		3 Max	3 Max	3 Max	3 Max	3 Max	3 Max

# Revelation

	120 mm	130 mm	140 mm	150 mm	160 mm		120 mm	130 mm	140 mm
27.5"B						29"B			
	6 Max	5 Max	5 Max	4 Max	4 Max		6 Max	5 Max	5 Max

# RS-1™

	80 mm	90 mm	100 mm	110 mm	120 mm
26" 27.5" 29"					
	3 Max	3 Max	3 Max	3 Max	3 Max

# SID®

	80 mm	100 mm
27.5" 27.5"B 29" 29" B		
	3 Max	3 Max

# Yari DPA

	150 mm	160 mm	170 mm	180 mm
27.5"B 29"B				
	6 Max	5 Max	5 Max	4 Max

# Yari™ DebonAir™

	150 mm	160 mm	170 mm	180 mm		150 mm	160 mm	170 mm	180 mm
27.5"B					29"B				
	5 Max	5 Max	4 Max	4 Max		5 Max	5 Max	4 Max	4 Max

For Bottomless Token™ installation instructions, find your fork's service manual at [www.sram.com/service](http://www.sram.com/service).

For Bottomless Token installation instructions, find your fork's service manual at [www.sram.com/service](http://www.sram.com/service).

For Bottomless Token installation instructions, find your fork's service manual at [www.sram.com/service](http://www.sram.com/service).

For Bottomless Token installation instructions, find your fork's service manual at [www.sram.com/service](http://www.sram.com/service).

For Bottomless Token installation instructions, find your fork's service manual at [www.sram.com/service](http://www.sram.com/service).

For Bottomless Token installation instructions, find your fork's service manual at [www.sram.com/service](http://www.sram.com/service).

For Bottomless Token installation instructions, find your fork's service manual at [www.sram.com/service](http://www.sram.com/service).

For Bottomless Token installation instructions, find your fork's service manual at [www.sram.com/service](http://www.sram.com/service).

For Bottomless Token installation instructions, find your fork's service manual at [www.sram.com/service](http://www.sram.com/service).