


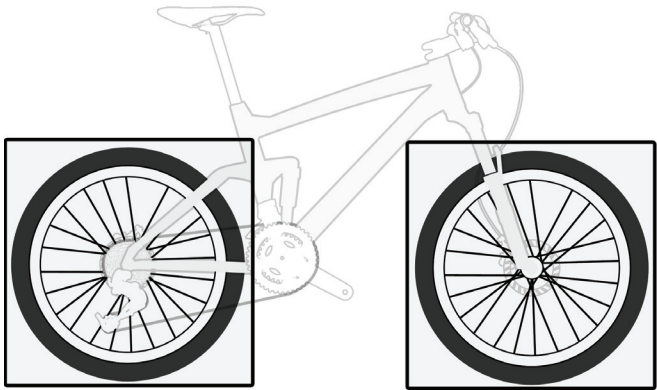

SRAM

WORLD HEADQUARTERS
SRAM LLC
1333 North Kingsbury, 4th Flr
Chicago, Illinois 60642
USA


ASIAN HEADQUARTERS
SRAM Taiwan
No. 1598-8 Chung Shan Road
Shen Kang Hsiang, Taichung
County 429 · Taiwan R.O.C.

EUROPEAN HEADQUARTERS
SRAM Europe
Paasbosweg 14-16
3862ZS Nijkerk
The Netherlands

www.sram.com

95-2015-004-000 Rev A · © SRAM LLC 2011


 Schmierfett Grasa Graisse Grasso Smeer	 Massa lubrificante グリス 潤滑脂 Smar Smrefedt	 Mazivo Грaсо Unsoare	 Drehmoment Apriete Valeur de couple Coppia Aanhaalmoment	 Momento de Torção トルク 扭緊 Moment obrotowy Spændingsmoment	 Utahovací moment Ποπή Cuplu de strângere
 Einbauen Instalación Installer Installare Monteren	 Instalar 取り付け 安裝 Montaž Montering	 Namontovat Τοποθέτηση Montarea			

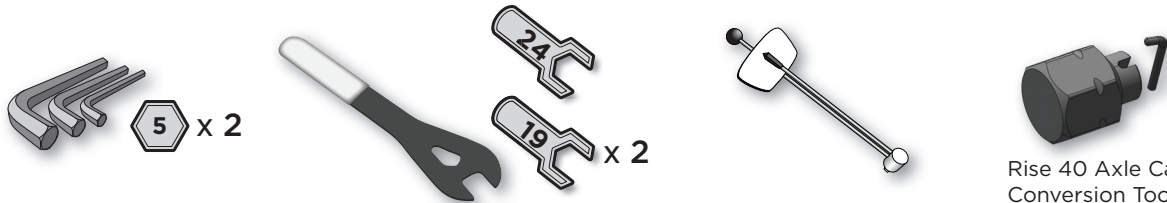




Rise 40 Axle Cap
Conversion Tool

Removal Ausbau Desmontaje Dépose Rimozione Dемontage Desmontagem 取り外し 拆卸 Demontaj Fjernelse Demontáž Αφαίρεση Demontare


QR / Torque Cap

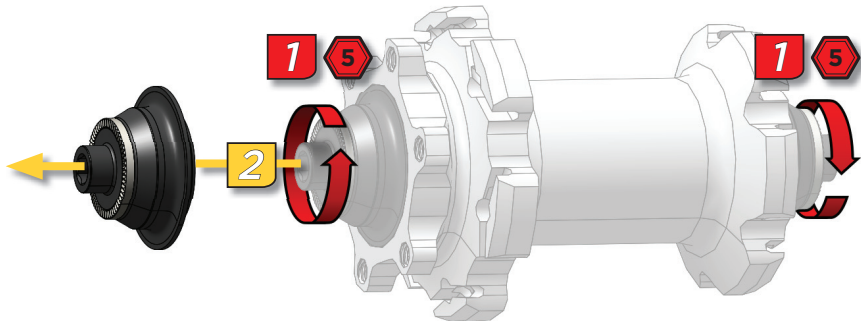


Thru 15

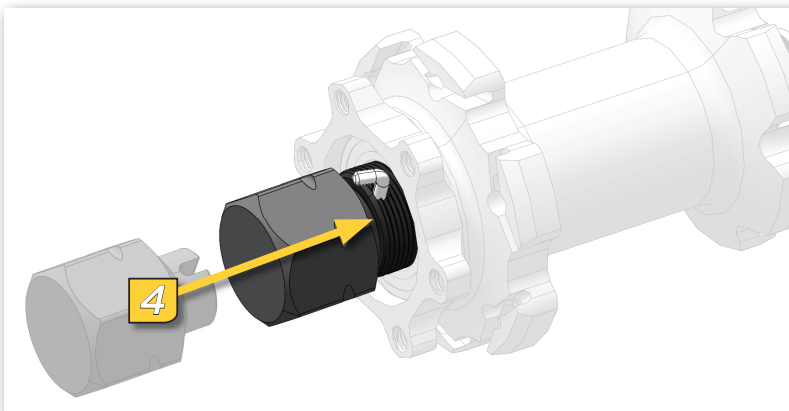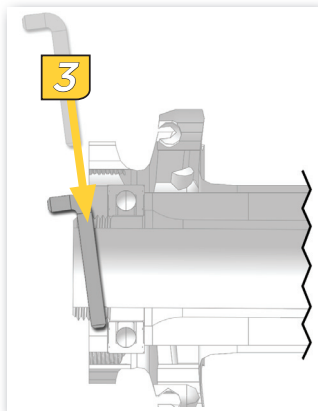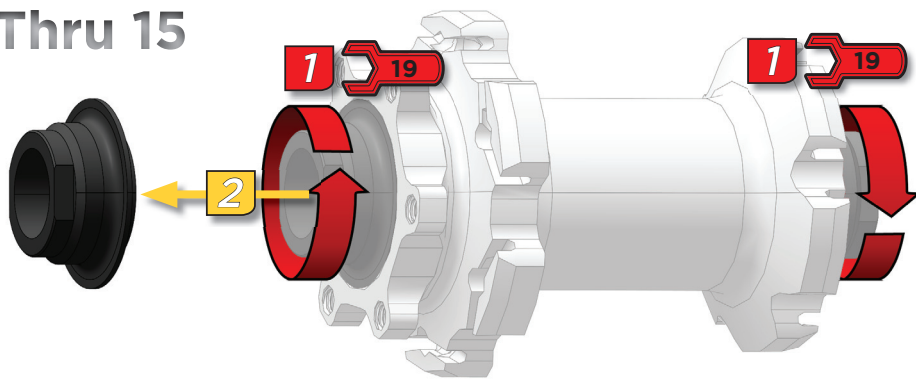


QR / Torque Cap

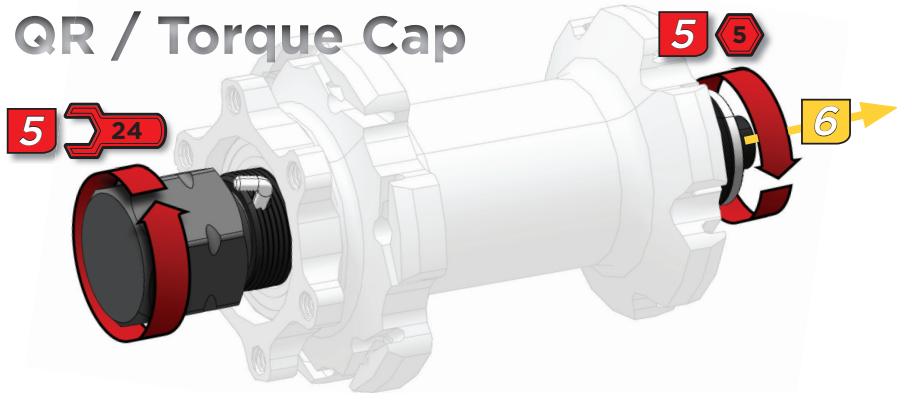


Thru 15

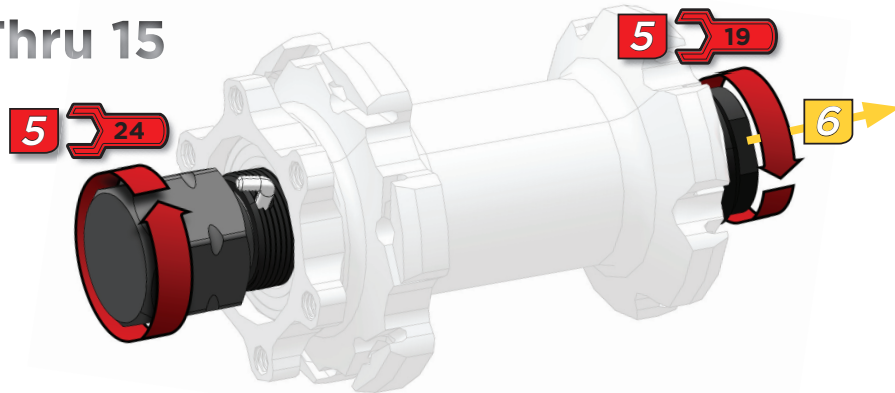

QR

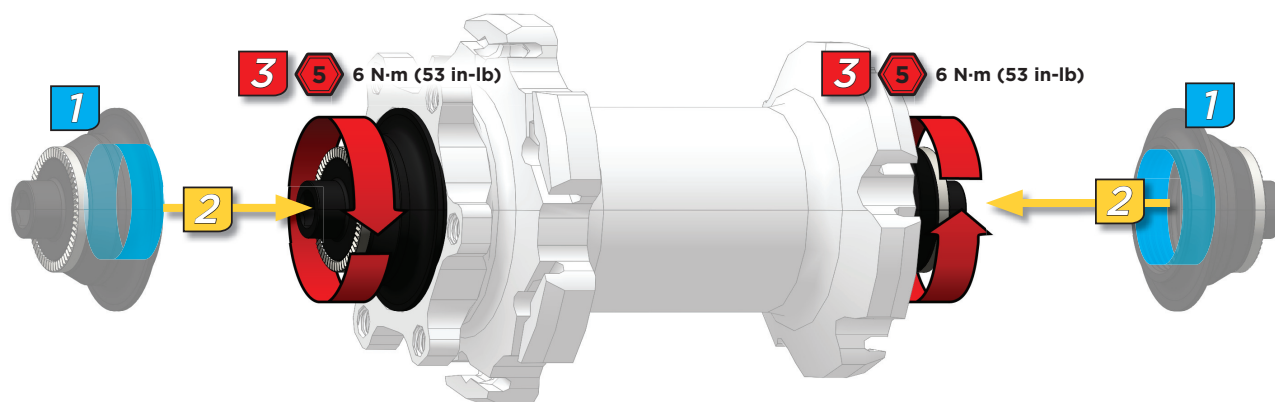

Torque Cap

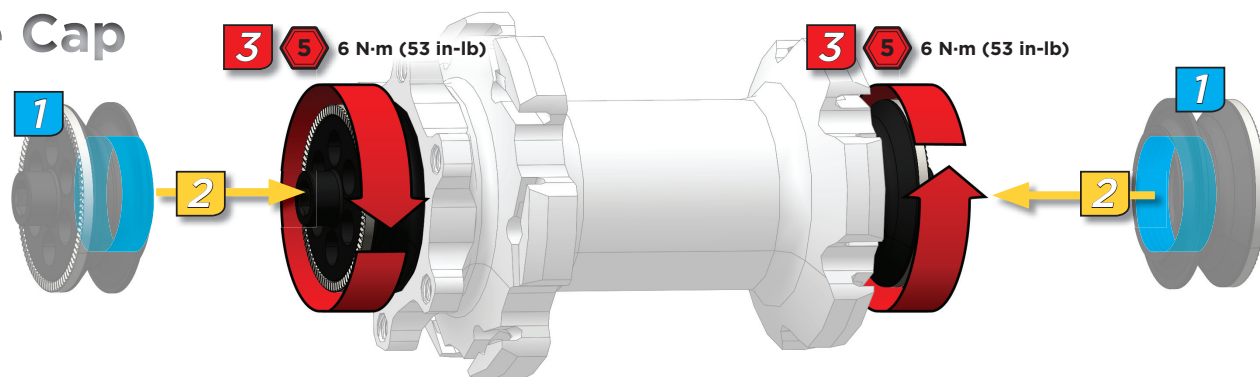

Thru 15

