



2015-2018 BoXXer RC



Service Manual



SRAM LLC WARRANTY

THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS AGAINST SRAM, LLC. YOU MAY ALSO HAVE OTHER RIGHTS THAT VARY FROM STATE TO STATE, COUNTRY, OR PROVINCE. THIS WARRANTY DOES NOT AFFECT YOUR STATUTORY RIGHTS. TO THE EXTENT THIS WARRANTY IS INCONSISTENT WITH THE LOCAL LAW, THIS WARRANTY SHALL BE DEEMED MODIFIED TO BE CONSISTENT WITH SUCH LAW. FOR A FULL UNDERSTANDING OF YOUR RIGHTS, CONSULT THE LAWS OF YOUR COUNTRY, PROVINCE, OR STATE.

THIS WARRANTY APPLIES TO SRAM PRODUCTS MADE UNDER THE SRAM, ROCKSHOX, TRUVATIV, ZIPP, QUARQ, AVID AND TIME BRAND NAMES.

EXTENT OF LIMITED WARRANTY

Except as otherwise set forth herein, SRAM warrants its bicycle components to be free from defects in materials or workmanship for a period of two (2) years after original purchase of the product.

SRAM warrants all Zipp MOTO Wheels and Rims to be free from defects in materials or workmanship for the lifetime of the product.

SRAM warrants all non-electronic Zipp branded bicycle components, Model Year 2021 or newer, to be free from defects in materials or workmanship for the lifetime of the product.

GENERAL PROVISIONS

This warranty only applies to the original owner and is not transferable. Claims under this warranty must be made through the retailer where the bicycle or the SRAM product was purchased or a SRAM authorized service location. Original proof of purchase is required. All SRAM warranty claims will be evaluated by a SRAM authorized service location whereupon acceptance of the claim the product will be repaired, replaced, or refunded at SRAM's discretion. To the extent allowed by local law claims under this warranty must be made during the warranty period and within one (1) year following the date on which any such claim arises.

NO OTHER WARRANTIES

EXCEPT AS DESCRIBED HEREIN, AND TO THE EXTENT ALLOWED BY LOCAL LAW, SRAM MAKES NO OTHER WARRANTIES, GUARANTIES, OR REPRESENTATIONS OF ANY TYPE (EXPRESS OR IMPLIED), AND ALL WARRANTIES (INCLUDING ANY IMPLIED WARRANTIES OF REASONABLE CARE, MERCHANTABILITY, OR FITNESS FOR A PARTICULAR PURPOSE) ARE HEREBY DISCLAIMED.

LIMITATIONS OF LIABILITY

EXCEPT AS DESCRIBED HEREIN, AND TO THE EXTENT PERMITTED BY LAW, IN NO EVENT SHALL SRAM OR ITS THIRD PARTY SUPPLIERS BE LIABLE FOR DIRECT, INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES. SOME STATES (COUNTRIES AND PROVINCES) DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL DAMAGES, SO THE ABOVE LIMITATION MAY NOT APPLY TO YOU.

LIMITATIONS OF WARRANTY

This warranty does not apply to products that have been incorrectly installed, adjusted, and/or maintained according to the respective SRAM user manual. The SRAM user manuals can be found online at sram.com/service.

This warranty does not apply to damage to the product caused by a crash, impact, abuse of the product, non-compliance with manufacturer's specifications of intended usage, or any other circumstances in which the product has been subjected to forces or loads beyond its design.

This warranty does not apply when the product has been modified, including but not limited to, any attempt to open or repair any electronic and electronic related components, including the motor, controller, battery packs, wiring harnesses, switches, and chargers.

This warranty does not apply when the serial number or production code has been deliberately altered, defaced, or removed.

SRAM components are designed for use only on bicycles that are pedal powered or pedal assisted (e-Bike/Pedelec).

Notwithstanding anything else set forth herein, the battery pack and charger warranty does not include damage from power surges, use of improper charger, improper maintenance, or such other misuse.

This warranty shall not cover damages caused by the use of parts of different manufacturers or parts that are not compatible or suitable for use with SRAM components.

This warranty shall not cover damages resulting from commercial (rental) use.

WEAR AND TEAR

This warranty does not apply to normal wear and tear. Wear and tear parts are subject to damage as a result of normal use, failure to service according to SRAM recommendations, and/or riding or installation in conditions or applications other than recommended.

WEAR AND TEAR PARTS INCLUDE:

- | | | | |
|-----------------------|-----------------------------------|---|---|
| • Aero bar pads | • Chains | • Jockey wheels | • Sprockets |
| • Air sealing o-rings | • Cleats | • Rear shock mounting hardware and main seals | • Stripped threads/bolts (aluminum, titanium, magnesium or steel) |
| • Batteries | • Corrosion | • Rubber moving parts | • Tires |
| • Bearings | • Disc brake rotors | • Shifter and Brake cables (inner and outer) | • Tools |
| • Bottomout pads | • Dust seals | • Shifter grips | • Transmission gears |
| • Brake pads | • Free hubs, Driver bodies, Pawls | • Spokes | • Upper tubes (stanchions) |
| • Bushings | • Foam rings, Glide rings | | • Wheel braking surfaces |
| • Cassettes | • Handlebar grips | | |

ZIPP IMPACT REPLACEMENT POLICY

Zipp branded products, Model Year 2021 or newer, are covered under a lifetime impact-damage replacement policy. This policy can be used to obtain a replacement of a product in the event of non-warranty impact damage occurring while riding your bicycle. See www.zipp.com/support for more information.

TABLE OF CONTENTS

BOXXER RC EXPLODED VIEW.....

5

ROCKSHOX SUSPENSION SERVICE.....

6

PARTS AND TOOLS NEEDED FOR SERVICE

6

RECORD YOUR SETTINGS

7

SERVICE INTERVAL INFORMATION

7

BOXXER TORQUE CHART.....

7

BOXXER OIL VOLUME.....

7

FORK REMOVAL.....

8

LOWER LEG REMOVAL.....

10

LOWER LEG SEAL SERVICE.....

13

COIL SPRING SERVICE

16

COIL SPRING REMOVAL.....

16

COIL SPRING INSTALLATION

19

DAMPER SERVICE

21

COMPRESSION DAMPER REMOVAL

21

REBOUND DAMPER REMOVAL

23

REBOUND DAMPER INSTALLATION.....

25

COMPRESSION DAMPER INSTALLATION.....

27

LOWER LEG ASSEMBLY

29

FORK INSTALLATION


31



SAFETY FIRST!

We care about YOU. Please, always wear your safety glasses and protective gloves when servicing RockShox products.
Protect yourself! Wear your safety gear!

BoXXer RC Exploded View

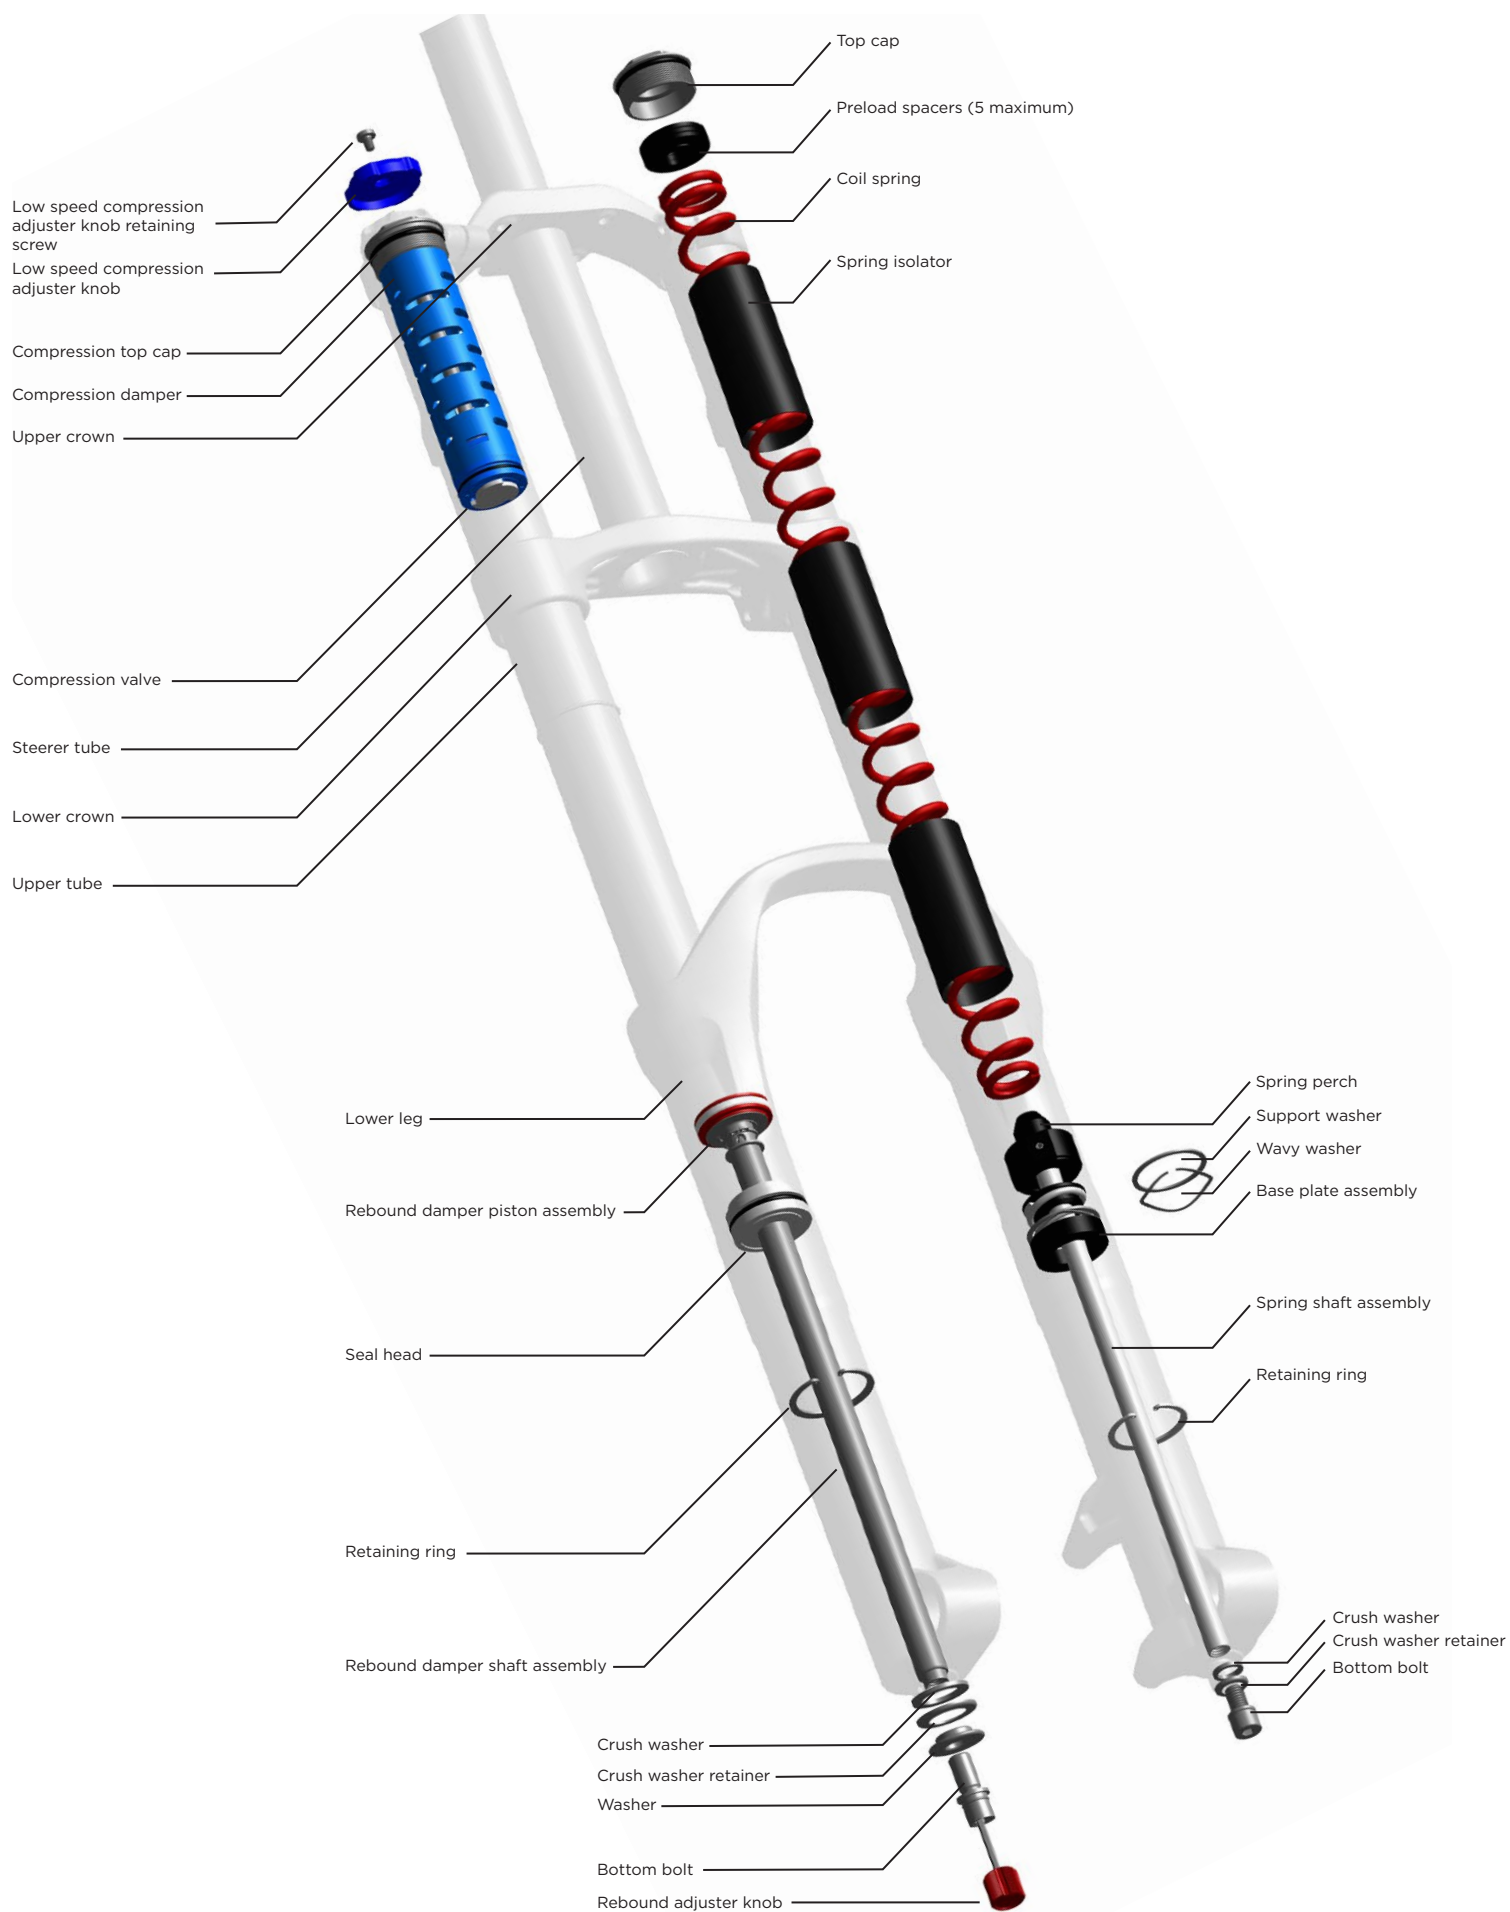

RockShox Suspension Service

We recommend that you have your RockShox suspension serviced by a qualified bicycle mechanic. Servicing RockShox suspension requires knowledge of suspension components as well as the special tools and fluids used for service.

For exploded diagram and part number information, please refer to the Spare Parts Catalog available on our website at www.sram.com/service. For order information, please contact your local SRAM distributor or dealer.

Information contained in this publication is subject to change at any time without prior notice. For the latest technical information, please visit our website at www.sram.com/service.

Your product's appearance may differ from the pictures contained in this publication.

Parts and Tools Needed for Service

- Safety glasses
- Nitrile gloves
- Apron
- Clean, lint-free rags
- Oil pan
- Isopropyl alcohol
- Bicycle stand
- Bench vise with aluminum soft jaws
- RockShox 5wt suspension fluid
- Maxima PLUSH Dynamic Suspension Lube Light or RockShox 0w-30 Suspension Oil
- SRAM Butter grease
- Shock pump
- 35 mm seal installation tool
- Diagonal cutter (26")
- Schrader valve core tool
- 2, 2.5, 4, 5, and 6 mm hex wrenches
- 2, 2.5, 4, 5, and 6 mm hex bit sockets
- 24 mm socket wrench
- Torque wrench
- Needle-nose pliers
- Large internal snap ring pliers
- Pick
- Long plastic or wooden dowel
- Ruler
- Cable tie (26")
- Heat gun or hair dryer
- Downhill tire lever
- Plastic mallet
- Flat head screwdriver

SAFETY INSTRUCTIONS

Always wear nitrile gloves when working with suspension fluid and bicycle grease.

Place an oil pan on the floor underneath the area where you will be working on the fork.

Record your Settings

Use the charts below to record your BoXXer fork settings to return your fork to its pre-service settings.

Service date - helps you keep track of service intervals.	
Dual Crown height - measure the distance from the top of the upper to tube to the top of the lower crown (see figure in Step 1).	
Rebound setting - count the number of clicks while turning the rebound adjuster fully counter-clockwise.	
Compression setting - count the number of clicks while turning the compression adjuster fully counter-clockwise.	

Service Interval Information

Maintenance	Interval (hours)
Clean dirt and debris from upper tubes	Every ride
Inspect upper tubes for scratches	Every ride
Check front suspension fasteners for proper torque	25
Remove lowers, clean/inspect bushings and change oil bath	50
Clean and lubricate coil spring assembly	100
Change oil in damping system	100

BoXXer Torque Chart

Part	Tool	Torque
Maxle Lite DH (non-drive side)	6 mm hex bit socket	3.4 N•m (30 in-lb)
Maxle Lite DH (drive side)	6 mm hex bit socket	5.7 N•m (50 in-lb)
Crown bolts	4 mm hex bit socket	5 N•m (44 in-lb)
Bottom bolts	5 mm hex bit socket	7.3 N•m (65 in-lb)
Top caps	24 mm socket	7.3 N•m (65 in-lb)

BoXXer Oil Volume

Part	Oil Weight	Volume (mL)
Drive side lower leg	Maxima PLUSH Dynamic Suspension Lube Light or RockShox 0w-30 Suspension Oil	10
Non-drive side lower leg		20
Drive side upper tube	RockShox 5wt	290
Non-drive side upper tube	SRAM Butter Grease	
Suspension oil/fluid - Maxima PLUSH Dynamic Suspension Lube and RockShox 0w-30 suspension oils/fluids are forward and backward compatible with RockShox Dynamic Seal Grease and SRAM Butter Grease.		
Use ONLY RockShox, SRAM, and Maxima suspension oils/fluids and grease, unless otherwise specified. Use of any other lubricants can damage seals and decrease performance.		

Fork Removal

We recommend the following steps to remove your BoXXer fork from the bicycle. Removing the fork from the bicycle provides easy access to internal components and is more convenient than working around a complete bicycle.

- 1 To assist you with post-service assembly, record the distance from the top of the upper tube to the top of the lower crown.



- 2 Use a 6 mm hex wrench to loosen the non-drive side bolt of the Maxle Lite DH until detent clicks are no longer felt.



- 3 Use a 6 mm hex wrench to remove the Maxle Lite DH from the drive side of the fork. Pull the wheel down to remove it from the fork.



- 4 **27.5" forks:** Use a 2.5 mm hex wrench to remove the brake hose from the hose brace on the fork arch.

26" forks: Use a diagonal cutter to cut the cable tie holding the brake hose to the fork arch.

Remove the brake caliper according to the brake manufacturer's instructions.



- 5 Use a 4 mm hex wrench to loosen the four lower crown and two upper crown pinch bolts clamping the upper tubes.

Do not loosen the steerer tube clamping bolt located on the upper crown.



- 6 Slide the upper tubes down so they clear the upper crown. Leave enough clearance between the upper tube and upper crown to remove the frame bumpers.

Use a 4 mm hex wrench to tighten one of the lower crown bolts to temporarily hold the tubes in place while you remove the frame bumpers.




- 7 Use your thumb to pry the thickest section of each frame bumper away from the upper tube. Spray isopropyl alcohol or water between each bumper and upper tube. Twist the frame bumpers back and forth until they are loose on the upper tubes.

Remove the frame bumpers from the upper tubes.



- 8 Use a 4 mm hex wrench to loosen the lower crown bolt. Slide the tubes through the lower crown and remove the fork from the bicycle.

Spray isopropyl alcohol on the upper tubes and crown clamping surface and clean them with a rag.

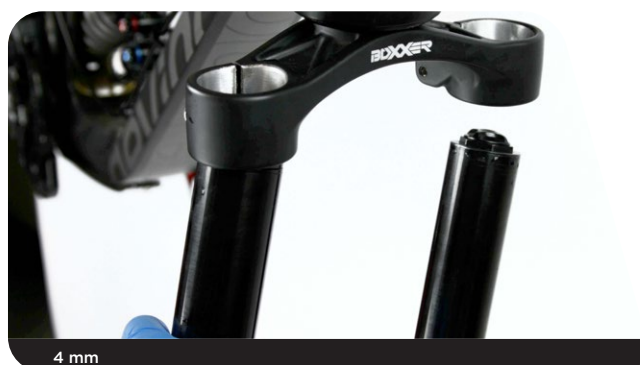

Lower Leg Removal

- 1 Clamp the non-drive side upper tube into a bicycle stand.



- 2 Use a 5 mm hex wrench to loosen the non-drive side bottom bolt 3 to 4 turns.



- 3 Place an oil pan beneath the fork to catch any draining fluid. Use a plastic mallet to firmly strike the non-drive side bottom bolt to dislodge the air shaft from the lower leg. Use a 5 mm hex wrench to remove the bottom bolt from the lower leg.



5 mm

- 4 Firmly pull the lower leg downward until fluid begins to drain. Continue pulling downward to remove the lower leg from the non-drive side upper tube.

If the lower leg does not slide off of the upper tube, then the press-fit of the shaft to the lower leg may still be engaged. Reinstall the bottom bolt 2 to 3 turns and repeat steps 2-4.

NOTICE

Do not hit the fork arch with any tool when removing the lower leg as this could damage the lower leg.



- 5 Clamp the drive side upper tube into a bicycle stand.



- 6 Remove the rebound adjuster knob located at the bottom of the drive side lower leg.



- 7 Use a 5 mm hex wrench to loosen the drive side bottom bolt 3 to 4 turns.



- 8 Place an oil pan beneath the fork to catch any draining fluid. Use a plastic mallet to firmly strike the drive side bottom bolt to dislodge the rebound damper shaft from the lower leg. Use a 5 mm hex wrench to remove the bottom bolt from the lower leg.

Do not dislodge the silver casting plug from the drive side lower leg.



- 9 Firmly pull the lower leg downward until fluid begins to drain. Continue pulling downward to remove the lower leg from the fork.

If the lower leg does not slide off of the upper tube, then the press-fit of the shaft to the lower leg may still be engaged. Reinstall the bottom bolt 2 to 3 turns and repeat steps 7-9.

NOTICE

Do not hit the fork arch with any tool when removing the lower leg as this could damage the fork.



Lower Leg Seal Service

- 1 Place the tip of a downhill tire lever underneath the lower lip of the dust wiper seal.

NOTICE

If using a flat blade screwdriver, make sure it has a round shaft. A screwdriver with a square shaft will damage the fork leg.



- 2 Stabilize the lower leg on a bench top or on the floor. Press down on the tire lever handle to remove the dust wiper seal.

Repeat on the other side.

NOTICE

Keep the lower leg assembly stable. Do not allow the lower leg to twist in opposite directions, compress toward each other, or be pulled apart. This will damage the lower leg.



- 3 Use your fingers to remove and discard the foam rings inside the lower leg.



- 4 Soak the new foam rings in Maxima PLUSH Dynamic Suspension Lube Light suspension fluid.



- 5** Spray isopropyl alcohol on the inside and outside of the lower leg. Clean the outside of the lower leg with a rag.

Wrap a rag around a long dowel and insert it into each lower leg to clean the inside of the lower leg.




- 6** Reinstall new foam rings on the top bushings in the lower leg.



- 7** Remove the wire spring from the new dust wiper seal and set it aside.



- 8** Insert the narrow end of a new dust wiper seal into the recessed end of the seal installation tool.

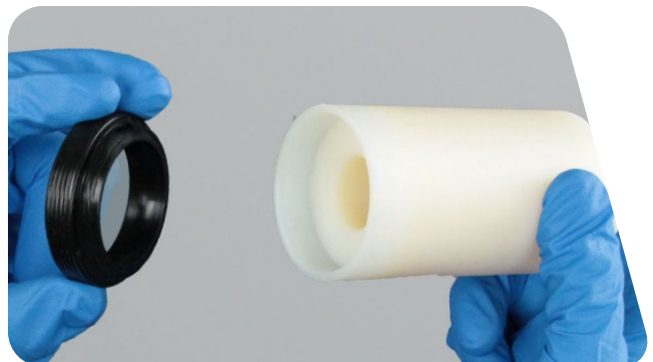

9 Hold the lower leg steady and use the seal installation tool to press the dust wiper seal evenly into the lower leg until the seal surface is flush with the top of the lower leg surface.

Reinstall the wire spring onto the dust wiper seal.

Repeat steps 7, 8, and 9 for the other side of the lower leg.

NOTICE

Only press the dust wiper seal into the lower leg until it is flush with the top surface of the lower leg. Pressing the dust wiper seal past the top surface of the lower leg can damage the foam rings.



Coil Spring Service

Coil Spring Removal

NOTICE

Inspect each part for scratches. Do not scratch any sealing surfaces when servicing your suspension. Scratches can cause leaks.

When replacing seals and o-rings, use your fingers or a pick to remove the seal or o-ring. Spray isopropyl alcohol on each part and clean with a rag. Apply SRAM Butter grease to the new seal or o-ring.


- 1 Clamp the non-drive side upper tube into a bicycle stand.



- 2 Use a 24 mm socket to remove the top cap.
Spray isopropyl alcohol on the upper tube threads and clean the threads with a rag.



- 3 Use your fingers or a pick to remove the top cap o-ring. Use your fingers to install a new o-ring.

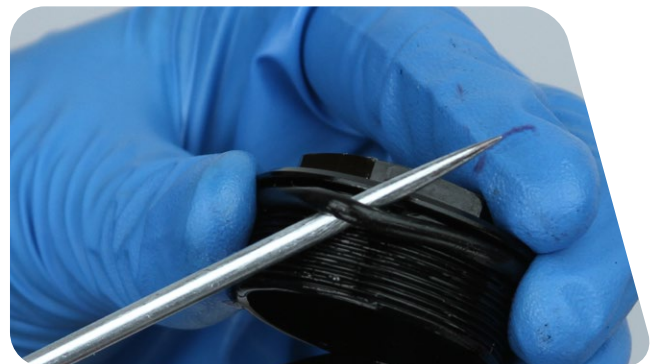

- 4** Use your fingers to remove the preload spacer(s). Pull the coil spring from the upper tube.
- Spray isopropyl alcohol on the preload spacer(s), coil spring, and upper tube threads and clean them with a rag.




- 5** Verify the three isolators are evenly spaced along the coil spring with approximately 50 mm of exposed coil at each end.
- To reposition an isolator, thread it along the coil by hand. Use a heat gun or hair dryer to shrink and secure the isolator in its position. Gradually heat the isolator until it emits a vapor.

⚠ CAUTION - BURN HAZARD

Do not get the heat gun or hair dryer too close to the isolator. Failure to do so may result in a burn hole in the isolator. Allow the isolator to cool down before handling. Failure to do so may result in burns.



- 6** Place the tips of large internal snap ring pliers into the eyelets of the retaining ring. Press firmly on the pliers to push the base plate into the upper tube enough to compress and remove the retaining ring.
- Slide the retaining ring onto your finger and release the spring shaft.

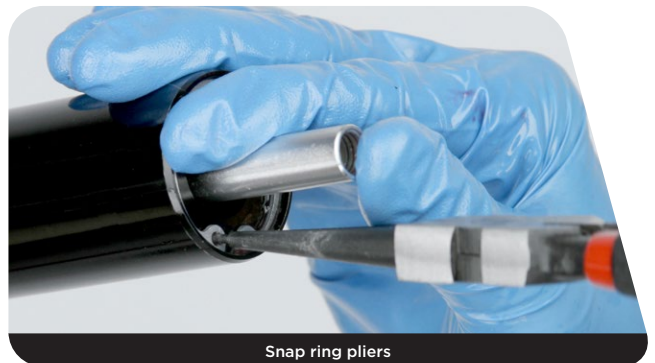

Snap ring pliers

- 7** Remove the spring shaft assembly from the upper tube.




8 Spray isopropyl alcohol on the inside and outside of the upper tube and clean it with a rag.

Wrap a rag around a long dowel and insert it into the upper tube to clean inside the upper tube.



9 Remove the base plate assembly, wavy washer and support washer from the spring shaft.

Spray isopropyl alcohol on the spring shaft, spring perch and base plate assembly and clean them with a rag.

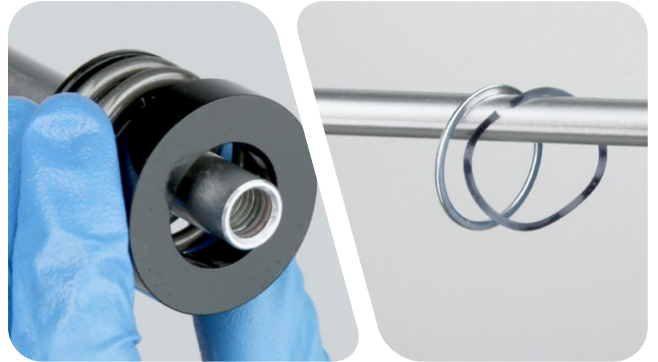


Coil Spring Installation

- 1 Install a new support washer and a new wavy washer on the spring shaft so that the support washer is closest to the spring perch.
Install the base plate assembly onto the spring shaft so that the small top out spring is oriented toward the spring perch.




- 2 Firmly push the spring shaft assembly into the bottom of the upper tube until the retaining ring groove is visible.

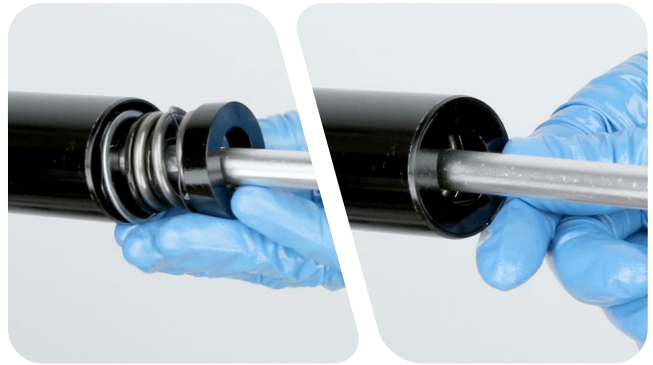


- 3 Place the tips of large internal snap ring pliers into the eyelets of the retaining ring and install the retaining ring into the groove.

Check that the retaining ring is properly seated in the retaining ring groove by using the snap ring pliers to rotate the retaining ring and seal head back and forth a few times, then firmly pull down on the spring shaft.

Retaining rings have a sharper-edged side and a rounder-edged side. Installing retaining rings with the sharper-edged side facing the tool will allow for easier installation and removal.

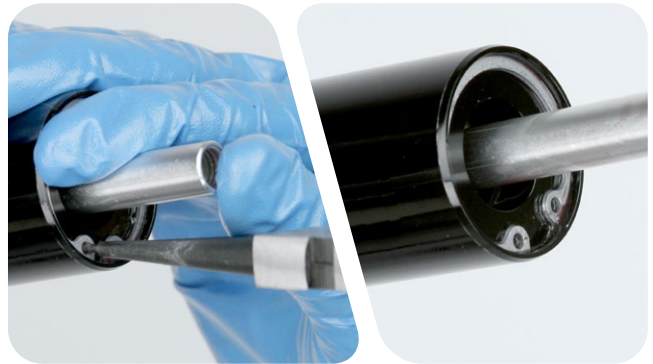


- 4** Apply a generous amount of SRAM Butter grease to the coil spring.
- Use a measuring device to identify the end of the coil spring with a smaller diameter.
- Install the smaller end of the coil spring into the top of the upper tube.

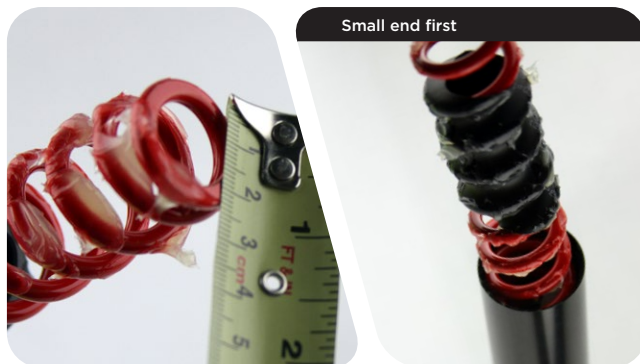

- 5** Use a measuring device to measure the distance from the top of the coil spring to the top of the upper tube. The distance should be less than 16 mm.
- Add up to five preload spacers to achieve a distance of 16 mm or your desired preload setting.

NOTICE

Installing more than five preload spacers into the upper tube will cause damage to your fork.

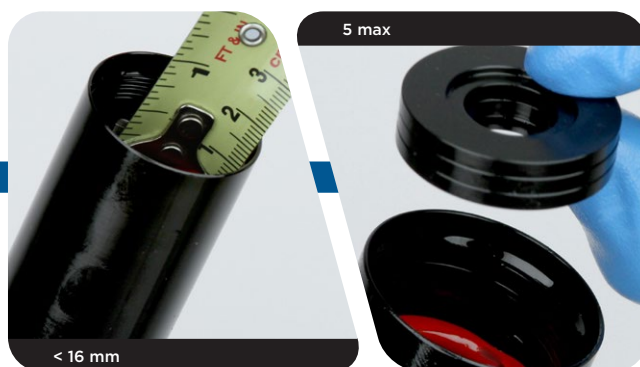

- 6** Insert the top cap into the top of the upper tube.
- Use a torque wrench with a 24 mm socket to tighten the top cap to 7.3 N·m (65 in-lb).



Damper Service

Compression Damper Removal

NOTICE

Inspect each part for scratches. Do not scratch any sealing surfaces when servicing your suspension. Scratches can cause leaks.

When replacing seals and o-rings, use your fingers or a pick to remove the seal or o-ring. Spray isopropyl alcohol on each part and clean with a rag. Apply SRAM Butter to the new seal or o-ring.

- 1 Clamp the drive side upper tube into a bicycle stand.



- 2 Use a 2 mm hex wrench to remove the low speed compression adjuster knob retaining screw. Remove the low speed compression adjuster knob.



- 3 Use a 24 mm socket to loosen the compression top cap. Remove the compression damper from the upper tube. Clean the upper tube threads with a rag.



- 4** Use your fingers or a pick to remove the compression top cap o-ring. Install a new compression top cap o-ring.



- 5** Use your fingers or a pick to remove the compression damper piston o-ring. Install a new o-ring.



Rebound Damper Removal

- 1** Pour the suspension fluid into an oil pan.
Place your finger over the end of the rebound damper shaft to prevent it from getting scratched while removing the retaining ring.

NOTICE

Scratches on the rebound damper shaft will allow oil to bypass the seal head into the lower leg, resulting in reduced spring performance.

Use large internal snap ring pliers to remove the retaining ring from the bottom of the upper tube.



- 2** Remove the rebound damper shaft assembly from the upper tube.




- 3** Spray isopropyl alcohol on the inside and outside of the upper tube and clean it with a rag.
Wrap a rag around a long dowel and insert it into the upper tube to clean inside the upper tube.



- 4** Remove the seal head from the rebound damper shaft.
Spray isopropyl alcohol on the rebound damper shaft and clean it with a rag.



- 5** Use your fingers or a pick to remove the outer seal head o-rings. Use a pick to pierce and remove the inner o-ring. Use your fingers to install the new o-rings.

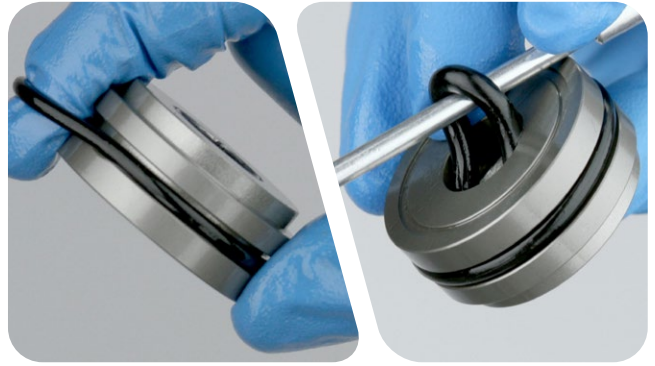


- 6** Use your fingers to remove the glide ring from the rebound damper piston. Use your fingers to install a new glide ring.



Rebound Damper Installation

- 1 Install the seal head on the rebound damper shaft with the narrow end facing the rebound damper piston.

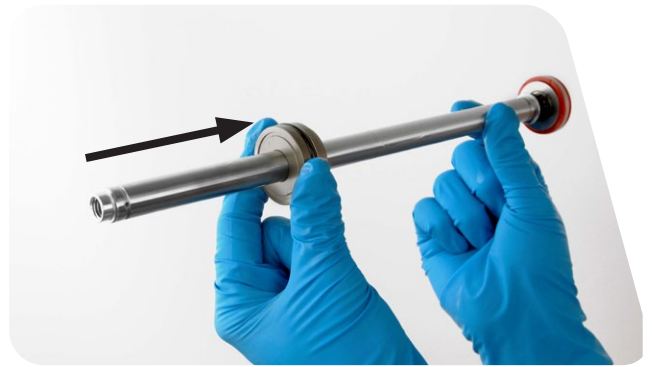

- 2 Insert the rebound damper piston into the bottom of the upper tube at an angle with the side opposite the glide ring split entering first. Continue to angle and rotate the piston until the glide ring is in the upper tube.



- 3 Use your finger to push the rebound seal head into the upper tube until the retaining ring groove is visible.



- 4 Push the rebound damper shaft into the upper tube to prevent it from getting scratched while installing the retaining ring.

NOTICE

Scratches on the rebound damper shaft will allow oil to bypass the seal head into the lower leg, resulting in reduced performance.

Place the tips of large internal snap ring pliers into the eyelets of the retaining ring and install the retaining ring into the groove.

Check that the retaining ring is properly seated in the retaining ring groove by using the snap ring pliers to rotate the retaining ring and seal head back and forth a few times.

Retaining rings have a sharper-edged side and a rounder-edged side. Installing retaining rings with the sharper-edged side facing the tool will allow for easier installation and removal.



- 5** Pull the rebound damper shaft down to the fully extended position.



Compression Damper Installation

- 1 Pour 290 mL RockShox 5wt suspension fluid in the drive side upper tube.

Suspension fluid volume is critical. Too much suspension fluid reduces available travel, too little suspension fluid decreases damping performance.



- 2 Use your fingers to turn the compression valve at the bottom of the compression damper to the open position.



- 3 Insert the compression damper into the upper tube. Press down and rock side to side until the damper is installed.



- 4 Use a torque wrench with a 24 mm socket to tighten the compression top cap to 7.3 N•m (65 in-lb).



5 Install the low speed compression adjuster knob and low speed compression adjuster knob retaining screw.

Use a torque wrench with a 2 mm hex bit socket to tighten the low compression adjuster knob retaining screw to 1-1.5 N•m (8-13 in-lb).



Lower Leg Assembly

- 1 Spray isopropyl alcohol on the upper tubes and clean them with a rag.



- 2 Apply a liberal amount of SRAM Butter to the inner surfaces of the lower oil seals and dust wiper seals.



- 3 Slide the upper tube with the damper into the drive side lower leg just enough to engage the upper bushing with the upper tube.
Slide the upper tube with the coil spring into the non-drive side lower leg just enough to engage the upper bushing with the upper tube.

NOTICE

Make sure both dust wiper seals slide onto the tubes without folding the outer lip of either seal.



- 4 Clamp the upper tube into a bicycle stand. Position the fork at a slight angle with the lower leg bolt holes oriented upward. Angle a syringe fitting in each lower leg bolt hole so the fluid will only contact the inside of the lower leg.

Inject 10 mL of suspension fluid into the drive side lower leg, and 20 mL of suspension fluid into the non-drive side lower leg.

NOTICE

Do not exceed the recommended fluid volume per leg as this can damage the fork. Do not let fluid fill the rebound shaft.



DS: 10 mL NDS: 20 mL

Maxima PLUSH Dynamic Suspension Lube Light

- 5** Slide the lower leg assembly along the upper tubes until it stops and the spring and damper shafts are visible through the lower leg bolt holes.


Use a rag to clean the outer surface of the lower leg.



- 6** Install a new crush washer retainer and crush washer on the non-drive side and drive side bottom bolts.

NOTICE

Dirty or damaged crush washers can cause leaks.

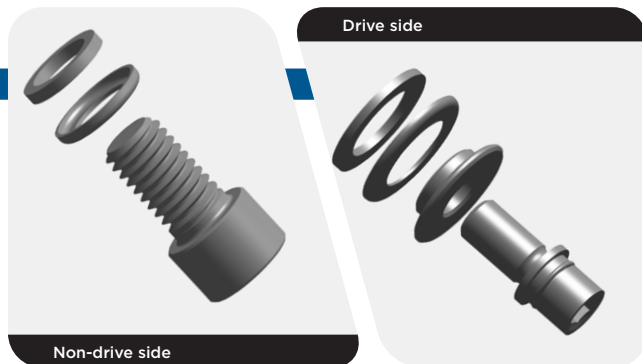

- 7** Thread the black bottom bolt into the non-drive side shaft of the lower leg. Thread the bottom bolt with the large washer, crush washer retainer and crush washer into the drive side shaft of the lower leg.

Use a torque wrench with a 5 mm hex bit socket to tighten the bolts to 7.3 N·m (65 in-lb).




- 8** Install the rebound adjuster knob onto the drive side bottom bolt.



- 9** Spray isopropyl alcohol on the entire fork and clean it with a rag.

Fork Installation

- 1 Slide each upper tube through the lower crown. Leave enough clearance between the upper tube and the upper crown to install the frame bumpers. Use a 4 mm hex wrench to tighten one of the lower crown bolts to temporarily hold the tubes in place while you install the bumper.

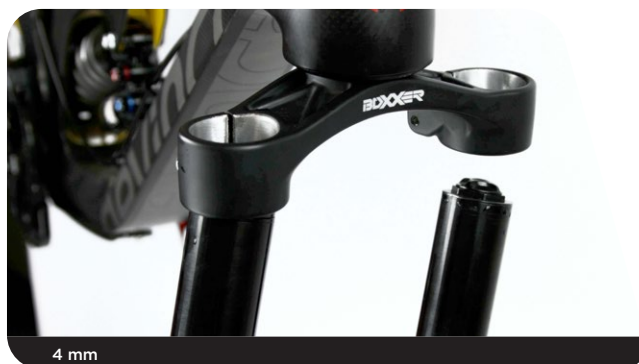

- 2 Spray isopropyl alcohol or water on the inner surfaces of each frame bumper and upper tube. Reinstall the frame bumpers onto the upper tubes.



- 3 Push and twist the upper tubes through the upper crown until both upper tubes extend past the top of the upper crown by an equal amount and at least 2 mm.
Measure the distance from the top of the upper tube to the top of the lower crown. This distance must be 156 mm (+/- 2 mm).



- 4 Align the BoXXer logo on the drive side upper tube with the RockShox logo on the lower leg.



- 5** Use a torque wrench with a 4 mm hex bit socket to tighten the top bolt on the lower crown to 5 N•m (44 in-lb). Use a 4 mm hex bit socket to tighten the bottom bolt on the lower crown to 5 N•m (44 in-lb). Tighten the top bolt to torque once more, and then tighten the bottom to torque again.

Repeat this tightening procedure for the bolts on the other side of the lower crown.



- 6** Use a torque wrench with a 4 mm hex bit socket to tighten the two upper crown pinch bolts to 5 N•m (44 in-lb).



27.5" fork: Use a 2.5 mm hex wrench to install the brake hose in the hose brace on the fork arch.

26.5" fork: Use a cable tie to connect the brake hose to the fork arch.

Install the brake caliper according to the brake manufacturer's instructions.



- 7** Position the front wheel in the lower leg dropouts so the hub is seated in the dropouts.

NOTICE

Verify no parts interfere with the lower leg. Consult your brake manufacturer's instructions if you need to adjust your disc brakes.



- 8** Install the threaded end of the Maxle Lite DH through the drive side of the hub until it engages the threads of the lower leg dropout.

Use a torque wrench with a 6 mm hex bit socket to tighten the drive side axle bolt to 5.7 N•m (50 in-lb).



- 9** Use a torque wrench with a 6 mm hex bit socket to tighten the non-drive side axle bolt to 3.4 N•m (30 in-lb).



- 10** Refer to your pre-service recorded settings to adjust the rebound and compression settings on the fork.



- 11** Spray isopropyl alcohol on the entire fork and clean it with a rag.



This concludes the service for RockShox BoXXer front suspension forks.

These are registered trademarks of SRAM, LLC:

1:1®, Accuwatt®, Avid®, ATAC®, AXS®, Bar®, Bioposition®, Blackbox®, BoXXer®, DoubleTap®, eTap®, Firecrest®, Firex®, Grip Shift®, GXP®, Holzfeller®, Hussefelt®, Icllic®, i-Motion®, Judy®, Know Your Powers®, NSW®, Omnium®, Osmos®, Pike®, PowerCal®, PowerLock®, PowerTap®, Qollector®, Quarq®, RacerMate®, Reba®, Rock Shox®, Ruktion®, Service Course®, ShockWiz®, SID®, Single Digit®, Speed Dial®, Speed Weaponry®, Spinscan®, SRAM®, SRAM APEX®, SRAM EAGLE®, SRAM FORCE®, SRAM RED®, SRAM RIVAL®, Stylo®, TIME®, Truvativ®, TyreWiz®, UDH®, Varicrank®, Velotron®, XO®, XO1®, X-SYNC®, XX1®, Zipp®

These are registered logos of SRAM, LLC:



These are trademarks of SRAM:

10K™, 1X™, 202™, 30™, 30 Course™, 35™, 302™, 303™, 353™, 404™, 454™, 808™, 858™, 3ZERO MOTO™, ABLC™, AeroGlide™, AeroBalance™, AeroLink™, Airea™, Air Guides™, AirWiz™, AKA™, AL-7050-TV™, Atmos™, Automatic Drive™, AxCad™, Axial Clutch™, Base™, BB5™, BB7™, BB30™, Bleeding Edge™, Blipbox™, BlipClamp™, BlipGrip™, Blips™, Bluto™, Bottomless Tokens™, ButterCup™, Cage Lock™, Carbon Bridge™, Centera™, Charger™, Charger 2™, Charger 3™, Charger Race Day™, Cleansweep™, Clickbox Technology™, Clics™, Code™, Cognition™, CoLab™, Connectamajig™, Counter Measure™, CYCLO™, DB8™, DD3™, DD3 Pulse™, DebonAir™, Deluxe™, Descendant™, DFour™, DFour91™, DH™, Dig Valve™, DirectLink™, Direct Route™, Domain™, DOT 5.1™, Double Decker™, Double Time™, Dual Flow Adjust™, Dual Position Air™, DUB™, DUB-PWR™, DZero™, E300™, E400™, Eagle™, E-Connect4™, ErgoBlade™, ErgoDynamics™, ESP™, EX1™, Exact Actuation™, Exogram™, FlightAttendant™, FlowLink™, FR-5™, FullPin™, G2™, G40™, GigaPipe™, GnarDog™, Guide™, GS™, GX™, Hammerhead™, HardChrome™, Hexfin™, HollowPin™, Howitzer™, HRD™, Hybrid Drive™, Hyperfoil™, i-3™, Impress™, Jaws™, Jet™, Kage™, Karoo™, Komfy™, LINK™, Lyrik™, MatchMaker™, Maxle™, Maxle 360™, Maxle DH™, Maxle Lite™, Maxle Lite DH™, Maxle Stealth™, Maxle Ultimate™, Micro Gear System™, MiniBlock™, Mini Cluster™, Monarch™, Monarch Plus™, Motion Control™, Motion Control DNA™, MRX™, MX™, Noir™, NX™, OCT™, OmniCal™, OneLoc™, Paceline™, Paragon™, PC-1031™, PC-1110™, PC-1170™, PG-1130™, PG-1050™, PG-1170™, Piggyback™, Poploc™, Power Balance™, Power Bulge™, PowerChain™, PowerDomeX™, Powered by SRAM™, PowerGlide™, PowerLink™, Power Pack™, Power Spline™, Predictive Steering™, Pressfit™, Pressfit 30™, Prime™, Qalvin™, R2C™, Rapid Recovery™, Recon™, Reverb™, Revelation™, Riken™, Roller Bearing Clutch™, Rolling Thunder™, RS-1™, Rudy™, Rush™, RXS™, Sag Gradients™, Sawtooth™, SCT - Smart Coasterbrake Technology™, Seeker™, Sektor™, SHIFT™, ShiftGuide™, Shorty™, Showstopper™, SIDLuxe™, Side Swap™, Signal Gear Technology™, SL™, SL-70™, SL-70 Aero™, SL-70 Ergo™, SL-80™, SL-88™, SLC2™, SL SPEED™, SL Sprint™, Smart Connect™, Solo Air™, Solo Spoke™, Speciale™, SpeedBall™, Speed Metal™, SRAM APEX 1™, SRAM Force 1™, SRAM RIVAL 1™, S-series™, Stealth-a-majig™, StealthRing™, Super-9™, Supercork™, Super Deluxe™, Super Deluxe Coil™, SwingLink™, SX™, Tangente™, TaperCore™, Timing Port Closure™, TSE Technology™, Tool-free Reach Adjust™, Top Loading Pads™, Torque Caps™, TRX™, Turnkey™, TwistLoc™, VCLC™, Vivid™, Vivid Air™, Vuka Aero™, Vuka Alumina™, Vuka Bull™, Vuka Clip™, Vuka Fit™, Wide Angle™, WiFLi™, X1™, X3™, X4™, X5™, X7™, X9™, X-Actuation™, XC™, X-Dome™, XD™, XDR™, XG-1150™, XG-1175™, XG-1180™, XG-1190™, X-Glide™, X-GlideR™, X-Horizon™, XLoc Sprint™, XPLR™, XPRESSO™, XPRO™, X-Range™, XX™, Yari™, ZEB™, Zero Loss™, ZM2™, ZR1™

POWERED BY SRAM

GXP

AXS

Specifications and colors subject to change without prior notice.

© 2022 SRAM, LLC

This publication includes trademarks and registered trademarks of the following companies:

Maxima™ and PLUSH™ are trademarks owned by Maxima Racing Oils.

SRAM[®]

www.sram.com



ASIAN HEADQUARTERS
SRAM Taiwan
No. 1598-8 Chung Shan Road
Shen Kang Hsiang, Taichung City
Taiwan R.O.C.

WORLD HEADQUARTERS
SRAM LLC
1000 W. Fulton Market, 4th Floor
Chicago, Illinois 60607
USA

EUROPEAN HEADQUARTERS
SRAM Europe
Paasbosweg 14-16
3862ZS Nijkerk
The Netherlands