

ROCKSHOX

reverb

# 2020-2023 Reverb Stealth C1



SERVICE MANUAL



# SAFETY FIRST!

We care about YOU. Please, always wear your safety glasses and protective gloves when servicing RockShox products.

Protect yourself! Wear your safety gear!

## **⚠ WARNING - PRESSURIZED DEVICE**

Suspension products may contain pressurized air, nitrogen, springs, and oil. Always wear certified safety glasses (ANSI Z87.1, EN166 EU) when performing any service on a suspension product (suspension fork, rear shock, seatpost). Failure to wear proper safety glasses can result in **SERIOUS INJURY OR DEATH**.

## RockShox Service

We recommend that you have your RockShox suspension serviced by a qualified bicycle mechanic. Servicing RockShox suspension requires knowledge of suspension components, as well as the use of specialized tools and lubricants/fluids. Failure to follow the procedures outlined in this service manual may cause damage to your component and void the warranty.

Visit [www.sram.com/service](http://www.sram.com/service) for the latest *RockShox Spare Parts Catalog* and technical information. For order information, please contact your local SRAM distributor or dealer.

Information contained in this publication is subject to change at any time without prior notice.

Your product's appearance may differ from the pictures contained in this publication.



For recycling and environmental compliance information, please visit: [www.sram.com/en/company/about/environmental-policy-and-recycling](http://www.sram.com/en/company/about/environmental-policy-and-recycling).

## Suspension Safety Precautions and Warnings

### SAFETY INSTRUCTIONS

To avoid serious injury or death, you **MUST** understand and follow the safety information in this document.

#### **WARNING - PRESSURIZED DEVICE**

Suspension products may contain pressurized air, nitrogen, springs, and oil.

Always wear certified safety glasses (ANSI Z87.1, EN166 EU) when performing any service on a suspension product (suspension fork, rear shock, seatpost).

DO NOT attempt to disassemble a suspension product before the product is fully depressurized. Follow depressurization procedures and remove the air valve as instructed, before attempting disassembly of a suspension product.

When performing service on a suspension product, keep your eyes, face, and body away from any part or lubricant that can suddenly eject under high pressure. DO NOT direct any pressurized suspension part at a person.

DO NOT attempt to puncture, crush, or incinerate any assembled suspension product.

**Failure to follow these preventative measures can result in SERIOUS INJURY OR DEATH.**

#### **WARNING - CRASH HAZARD**

Parts must be tightened to the specified torque.

To avoid separation of parts, threadlocker must be applied as instructed. Failure to apply threadlocker could result in separation of the parts.

Retaining rings must be fully seated in the retaining ring groove. Confirm the retaining ring is fully seated in the retaining ring groove after installation.

Do not use vinegar of any type to clean any part of a RockShox suspension product. Vinegar can cause permanent damage to parts which can, over time, result in product structural failure.

**Failure to follow these preventative measures can result in SERIOUS INJURY OR DEATH.**

#### **WARNING**

Do not ingest oil, fluid, grease, lubricant, or cleaner. Ingestion could lead to SERIOUS INJURY OR DEATH. Seek immediate medical attention if any oil, fluid, grease, lubricant, or cleaner is ingested.

#### **CAUTION**

Suspension products may contain lubricants which can lead to skin irritation. Always wear nitrile gloves when servicing suspension products. Failure to properly protect your skin can result in irritation. Seek medical attention if your skin is adversely affected by any suspension oil, fluid, grease, lubricant, and/or cleaner.

Always wear safety glasses. Do not allow oil, fluid, grease, lubricant, or cleaner to contact your eyes or face. Seek immediate medical attention if irritation occurs.

Use care when working with sharp tools and parts. Never use sharp tools coated with oil and/or grease. Clean and remove all oil and/or grease from your hands and gloves, and tools before working with any sharp tool or part. Failure to do so can result in personal injury.

Place an oil pan on the floor underneath the product during service to catch any drained or spilled fluids. To avoid a slip and fall, and possible injury or harm, immediately clean any oil, fluid, grease, or lubricant from the floor in your work area.

# TABLE OF CONTENTS

MODEL CODE IDENTIFICATION .....	6
WARRANTY AND TRADEMARK.....	6
PRODUCT IDENTIFICATION - REVERB STEALTH C1.....	6
RECOMMENDED SERVICE INTERVALS.....	7
SERVICE HISTORY .....	7
BRASS KEY SIZE.....	7
TORQUE VALUES .....	8
PARTS, TOOLS, AND SUPPLIES .....	9
<b>EXPLODED VIEW - REVERB STEALTH C1.....</b>	<b>10</b>
<b>SEATPOST TROUBLESHOOTING.....</b>	<b>11</b>
VENT VALVE PROCEDURE.....	11
<b>SEATPOST SERVICE.....</b>	<b>14</b>
SEATPOST REMOVAL.....	14
HYDRAULIC HOSE DISCONNECT.....	17
<b>50/200/600 HOUR SERVICE</b>	
LOWER POST REMOVAL.....	18
<b>200 HOUR SERVICE</b>	
TOP CAP AND SEALHEAD BUSHING REPLACEMENT.....	21
<b>600 HOUR SERVICE</b>	
INNER SHAFT DISASSEMBLY .....	25
UPPER POST DISASSEMBLY .....	30
TOP CAP INSTALLATION.....	32
INTERNAL FLOATING PISTON (IFP) INSTALLATION.....	33
INNER SHAFT ASSEMBLY .....	36
POPPET VALVE INSTALLATION .....	38
INNER SHAFT INSTALLATION .....	40
<b>50/200/600 HOUR SERVICE</b>	
LOWER POST INSTALLATION .....	43
BRASS KEY INSTALLATION .....	44
LOCK RING INSTALLATION.....	46
<b>REMOTE LEVER.....</b>	<b>48</b>
HOSE BARB REPLACEMENT (OPTIONAL) .....	48
<b>HYDRAULIC HOSE.....</b>	<b>51</b>
<b>50/200/600 HOUR SERVICE</b>	
CONNECT TO SEATPOST .....	51

## Part Preparation and Service Procedures

### Part Preparation

Remove the component from the bicycle before service.

Clean the exterior of the product with mild soap and water to avoid contamination of internal sealing part surfaces.

### Service Procedures

The following procedures should be performed throughout service, unless otherwise specified.

To maintain proper lubrication and function, clean Reverb **internal** parts with **only** a clean, lint-free shop towel. Clean the sealing surface on the part and inspect it for scratches.

#### NOTICE

Reverb internal part and sealing surfaces must remain lubricated for proper function. Do not use liquid cleaners or isopropyl alcohol to remove oil or grease from internal parts or seals.

#### ⚠ WARNING - CRASH HAZARD

DO NOT use vinegar of any type to clean any part of a RockShox suspension product. Vinegar can cause permanent damage to parts which can, over time, result in product structural failure, serious injury, and possibly death.

Clean Reverb **external** parts with soap and water, and a clean, lint-free shop towel.

For hard to reach places (e.g. lower post tube), wrap a clean lint-free shop towel around a non-metallic dowel to clean the inside.

Use your fingers to pinch and lift o-rings from the o-ring gland, then remove the o-ring with a non-metallic pick as needed. Replace the o-ring or seal with a new one from the service kit.

#### NOTICE

Do not scratch any sealing surfaces when servicing the product. Scratches can cause leaks. Consult the spare parts catalog to replace the damaged part.

Apply only RockShox Dynamic Seal Grease to the new seal or o-ring.



Use Reverb Vise Blocks when clamping Reverb parts in a bench vise.

Tighten the part with a torque wrench to the torque value listed in the red bar. When using a crowfoot socket and torque wrench, install the crowfoot socket at 90 degrees to the torque wrench.

#### ⚠ WARNING - CRASH HAZARD

Parts must be tightened to the specified torque. Failure to do so can result in SERIOUS INJURY OR DEATH.



## Model Code Identification

Product model code and specification details can be identified with the serial number on the product. Model codes can be used to identify the product type, series name, model name, and product version associated with the production model year. Product details can be used to identify spare parts, service kit, and lubricant compatibility.

Model Code example: **SP-RVB-S-C1**

**SP** = Product Type - **Seatpost**

**RVB** = Platform/Series - **Reverb**

**S** = Model - **Stealth**

**C1** = Version - (**C** - third generation, **1** - first iteration)

To identify the model code, locate the serial number on the product and enter it into the Search by Model Name or Serial Number field at [www.sram.com/service](http://www.sram.com/service).


## Warranty and Trademark

For SRAM Warranty information, visit: [www.sram.com/warranty](http://www.sram.com/warranty).

For SRAM Trademark information, visit: [www.sram.com/website-terms-of-use](http://www.sram.com/website-terms-of-use).

## Product Identification - Reverb Stealth C1

Production versions of Reverb Stealth can be identified visually. Your Reverb Stealth C1 can be identified by the saddle clamps, graphics, seatpost collar, and poppet cover.

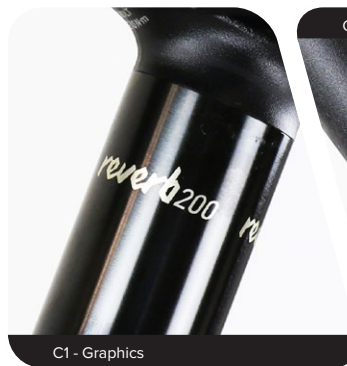

## Recommended Service Intervals

Regular service is required to keep your RockShox product working at peak performance. Follow this maintenance schedule and install the service parts included in each service kit that corresponds with the Service Hours Interval recommendation below. For spare part kit contents and details, refer to the RockShox Spare Parts Catalog at [www.sram.com/service](http://www.sram.com/service).

Service Hours Interval	Maintenance	Benefit
Every ride	Clean dirt and debris from seatpost	Extends wiper seal lifespan
		Minimizes damage to upper post
		Minimizes lower post contamination
	Inspect the upper post for scratches	Minimizes lower post contamination
Every 50 Hours	Check remote hydraulic pressure	Ensures proper remote actuation function
	Remove the lower post, clean, inspect and replace brass keys as needed, and apply new grease	Reduces friction
		Extends wiper seal, top cap bushing, and brass key lifespan
Every 200 Hours	Perform remote lever bleed	Ensures proper remote actuation function
	Replace all parts included in the <i>Reverb Stealth C1 Service Kit - 200 hours</i>	Reduces friction
		Extends seatpost lifespan
Every 600 Hours	Perform full hydraulic remote system bleed	Ensures proper remote actuation function
	Replace all parts included in the <i>Reverb Stealth C1 Service Kit - 600 hours</i>	Restores hydraulic system and function
		Ensures proper remote actuation function

## Service History

Record each date of service to track service intervals.

	Service Hours Interval											
	50	100	150	200	250	300	350	400	450	500	550	600
Date of Service												

## Brass Key Size

**Size** = Record the number of etched lines on each key. Replace with the same [size keys](#).

## Torque Values

Part	Tool	Torque
<b>Internal</b>		
Internal sealhead to upper post	23 mm crowfoot	28 N•m (250 in-lb)
Main piston to inner shaft	9 mm crowfoot	4 N•m (35 in-lb)
Poppet valve cover to poppet valve housing	15 mm crowfoot and 10 mm open end wrench	6.5 N•m (56 in-lb)
Poppet valve housing to inner shaft	10 mm open end wrench	3.5-4.5 N•m (31-41 in-lb)
Lock ring to poppet valve cover	24 mm crowfoot and 15 mm open end wrench	5 N•m (44 in-lb)
Lock ring to lower post	24 mm crowfoot	20 N•m (177 in-lb)
<b>External</b>		
Collar to lower post	34 mm crowfoot	28 N•m (250 in-lb)
Post barb strain relief nut to poppet cover	13 mm crowfoot and 15 mm open end wrench	8.5 N•m (75 in-lb)
Connectamajig coupler to poppet cover	8 mm crowfoot and 15 mm open end wrench	4 N•m (35 in-lb)
Connectamajig coupler collar to hose coupler	9 mm crowfoot and 6 mm open end wrench	2 N•m (18 in-lb)
Saddle clamp bolts	T25 TORX bit socket	6 N•m (53 in-lb)
Bicycle frame seatpost clamp	Various	Do not exceed 6.7 N•m (59 in-lb)
<b>Remote and Bleed</b>		
Reverb 1x remote barb strain relief nut	13 mm crowfoot	8.5 N•m (75 in-lb)
Remote lever hose barb (standard)	6 mm crowfoot	3.2 N•m (28 in-lb)
Remote lever clamp (MMX)	T25 TORX bit socket	5.5 N•m (49 in-lb)
Remote lever clamp (discrete)	4 mm bit socket	2 N•m (18 in-lb)
Remote bleed screw (standard)	T10 TORX bit socket	2 N•m (18 in-lb)
Post bleed screw	T10 TORX bit socket	2 N•m (18 in-lb)

## Parts, Tools, and Supplies

### Parts

- Reverb Stealth C1 Service Kit - 200 hours
- Reverb Stealth C1 Service Kit - 600 hours
- Reverb brass keys, quantity 3 (use correct size)
- Hose barbs (optional)

### Safety and Protection Supplies

- Apron
- Clean, lint-free shop towel
- Nitrile gloves
- Oil pan
- Safety glasses

### Lubricants and Fluids

- Friction paste
- Maxima Racing Oils Serene Hydraulic Seat Post Fluid
- RockShox Dynamic Seal Grease
- RockShox Suspension Cleaner

### RockShox Tools

- Reverb IFP Height Tool - 210 mm
- RockShox shock pump
- RockShox Schrader Valve Tool
- RockShox Vent Valve Tool
- Reverb Vise Blocks

### Bicycle Tools

- Bicycle work stand

### Tools

- Adjustable open end wrench ( $\leq 34$  mm) (optional)
- Bench vise
- Cone wrench: 24 mm
- Crowfoot sockets: 6, 9, 10, 13, 15, 23, 24, 34 mm
- Dowel - non-metallic
- Hex bit socket: 4 mm
- Hex wrenches: 1.5, 4 mm
- Needle nose pliers
- Open end wrenches: 6, 9, 10, 13, 15, 23, 24, 34 mm
- Non-metallic pick
- Plastic cable ties (quantity 7-10, 15-20 cm length)
- Retaining ring pliers
- Screwdriver with plastic handle
- Socket: 9 mm
- Socket wrench
- Torque wrench (see [Torque Values chart](#) for range)
- TORX bit sockets: T10, T25
- TORX wrenches: T10, T25


## SAFETY INSTRUCTIONS

Always wear safety glasses and nitrile gloves when working with grease and seatpost hydraulic fluid.

Place an oil pan under the RockShox product during service.

### WARNING

Do not allow seatpost hydraulic fluid to come into contact with disc brake levers, calipers, pads, rotors, or braking surfaces. If hydraulic fluid contacts brake pads, the brake pads must be replaced. Use isopropyl alcohol to remove hydraulic fluid from any brake or braking surface. Failure to remove hydraulic fluid from brakes and braking surfaces can damage components and reduce brake performance, and may result in serious injury and/or death to the rider. Remove or cover brake components before performing seatpost service, hose replacement, or hydraulic remote bleed procedures.

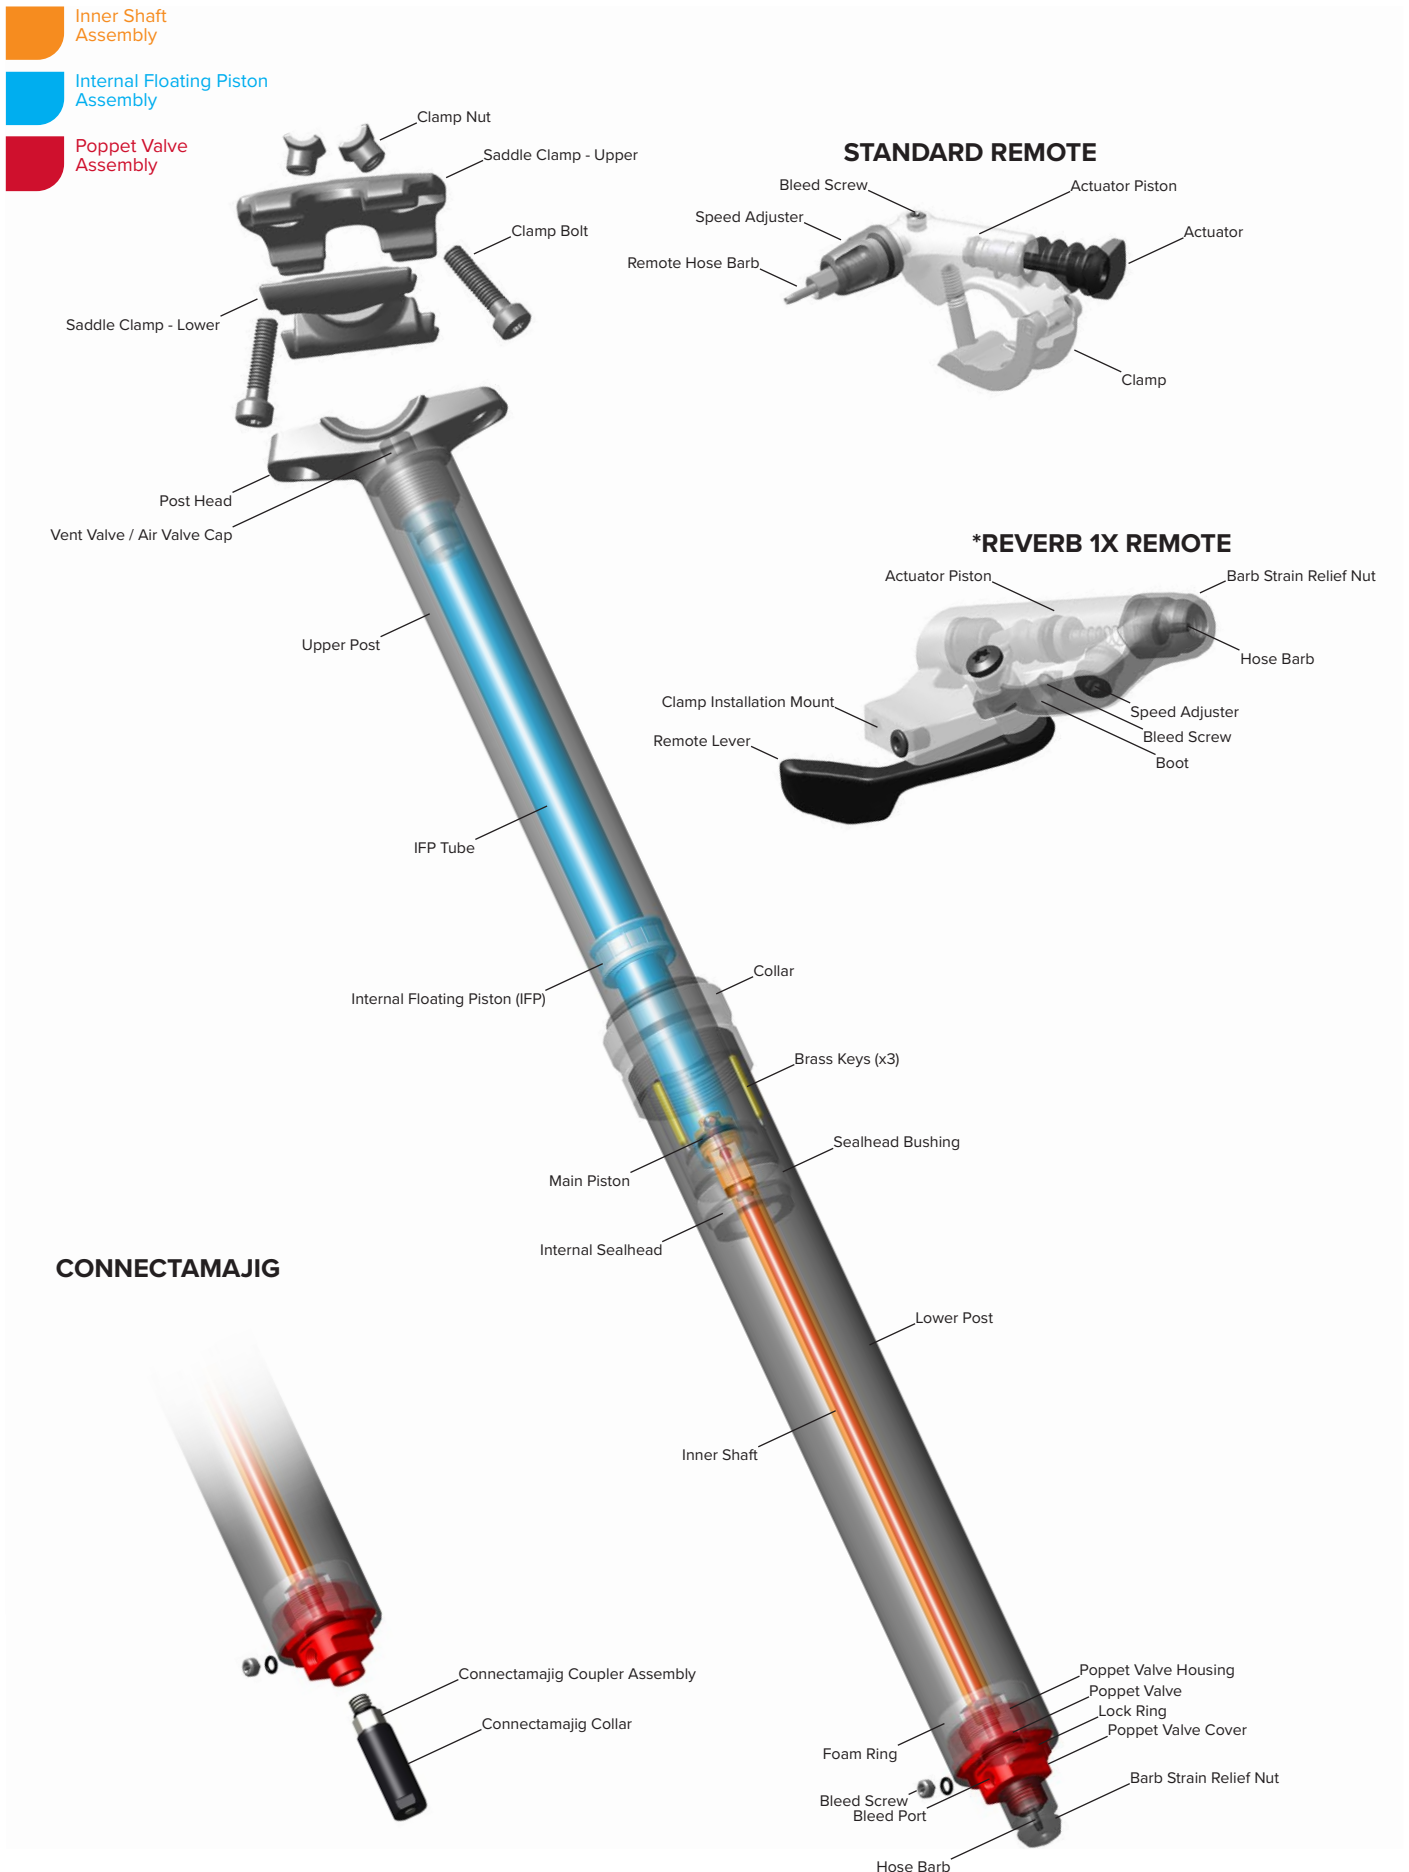

\*Compatible with Reverb Stealth and Reverb

## Seatpost Troubleshooting

The Vent Valve is located on the bottom of the seatpost and can be used after extended use if the seatpost develops a 'squish' suspension feel in the fully extended position when the rider is seated. If this occurs after extended use, it is an indication that air and oil have mixed and the Vent Valve should be used. Activating the Vent Valve will channel the air back into the air chamber and out of the oil.

### NOTICE

The Vent Valve should be used only if the seatpost compresses more than 5 mm during normal use in the fully extended position while seated. Do not use the Vent Valve if the seatpost is compressed. The Vent Valve is not to be used regularly and is only to be used if the seatpost compresses abnormally while seated.

### Vent Valve Procedure

- 1 Secure the bicycle in an upright position on a flat level surface.



- 2 Press the remote actuator until the seatpost is fully extended, then release the actuator.



- 3 Remove the saddle from the seatpost.  
Set the saddle clamps, bolts, and nuts aside.



- 4** Depress the Vent Valve with the Vent Valve tool. Hold the top of the seatpost head with your other hand. With the Vent Valve depressed, push the lower post down, and slowly compress the seatpost.



When you feel a hard stop point, hold the seatpost in place for **2 seconds**, then release the Vent Valve and stop pushing down on the seatpost.

#### NOTICE

For proper Vent Valve function, the bicycle must be on a flat level surface. The seatpost must be at a natural angle installed in the bicycle, and not perpendicular to the ground.

To avoid hydraulic bypass, do not compress the seatpost beyond the hard stop point. At the hard stop point, do not hold the Vent Valve down for more than 2 seconds.



- 5** Press the remote actuator and release when the seatpost is fully extended.



- 6** **Test:** Push down on the seatpost head to compress the seatpost. If the Vent Valve procedure was successful, the seatpost will not compress.

If the seatpost still compresses, this may be an indication the seatpost is in need of the 600 Hour service. Proceed to [Seatpost Service](#).



- 7** If successful, install the saddle onto the seatpost.  
Consult the *Reverb, Reverb Stealth, 1x Remote User Manual* at [www.sram.com/service](http://www.sram.com/service) for saddle installation procedures.



### Seatpost Removal

- 1 Secure the bicycle in an upright position.

#### NOTICE



The Reverb Stealth seatpost will be removed from the bicycle. Do not clamp the seatpost in a bicycle work stand.



- 2 Remove or cover the rear brake caliper to prevent contact with hydraulic fluid.



- 3 Press the remote actuator until the seatpost is fully extended, then release the actuator.

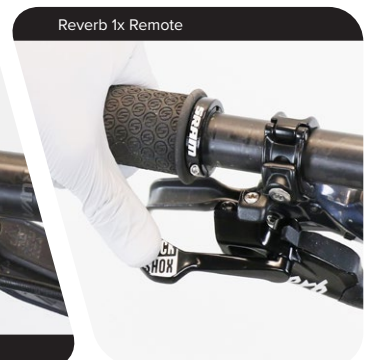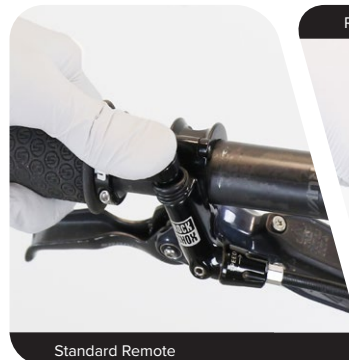


- 4 Set the speed adjuster to the full slow position.



**Rotating the speed adjuster to the slowest setting is critical for a successful bleed. Failure to do so may result in insufficient fluid volume inside the hydraulic remote system.**

**Standard Remote:** Turn the speed adjuster knob in the opposite direction of the arrow (counter-clockwise) until it stops.

**Reverb 1x Remote:** Remove the remote boot and rotate it out of the way. Turn the speed adjuster bolt (counter-clockwise) until it stops.

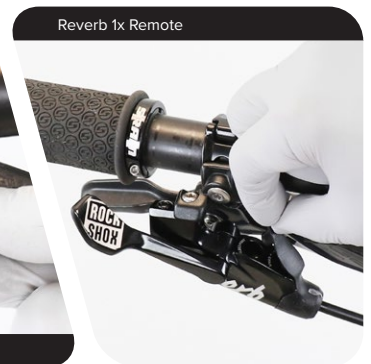

- 5 Remove the remote lever assembly from the handlebar.

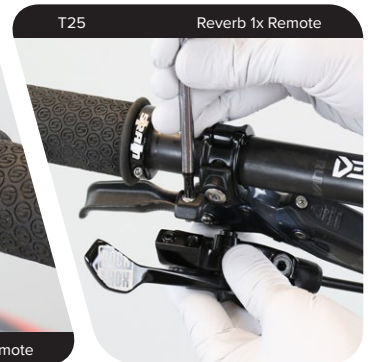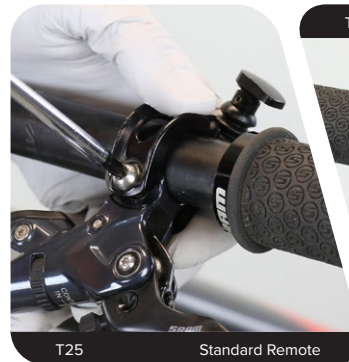

- 6 Remove the saddle from the seatpost.  
Set the saddle clamps, bolts, and nuts aside.



- 7 Loosen the seatpost clamp.




- 8 Remove the seatpost from the bicycle seat tube while simultaneously pushing the hydraulic hose into the hose port in the bicycle frame.

**The hose port location will vary depending on the bicycle frame. Consult with your frame manufacturer for additional information.**

**NOTICE**

Do not pull the seatpost out of the frame if there is tension at the hose. This can cause damage to the hydraulic hose and hose barb.

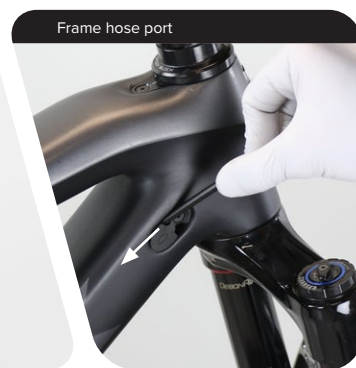

- 9 Clamp the seatpost into a bicycle work stand.
- Place a shop towel under the seatpost and hose to absorb any hydraulic fluid that may drip when the hose is disconnected.



## Hydraulic Hose Disconnect

The hydraulic hose must be disconnected from the seatpost for all service procedures.

The hose does not need to be disconnected from the remote lever for seatpost service.

To avoid contact with hydraulic fluid, remove or cover the rear brake caliper before disconnecting the hydraulic hose.

### ⚠ WARNING


Do not allow seatpost hydraulic fluid to come into contact with any brake components. Contaminated brake components can compromise brake performance, may cause brake failure, and can lead to serious injury and/or death.

#### 1 Disconnect the hydraulic hose from the seatpost.


**Hose Barb with Barb Strain Relief Nut:** Secure a plastic cable tie on the hose. The cable tie will prevent the nut from dropping inside the frame seat tube.

Unthread and remove the strain relief nut and hose assembly from the poppet cover.

Wipe away any excess fluid from the hose barb.

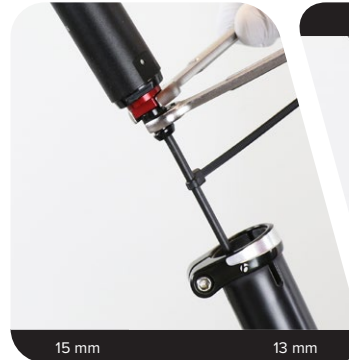

**Connectamajig:** Unthread and remove the hose coupler (A) from the Connectamajig coupler collar (B). Service can be performed with the Connectamajig coupler assembly (C) installed.

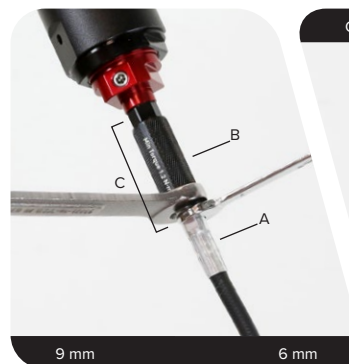

Before disassembly, confirm the seatpost is free of any dirt or contaminants.

Service procedures are the same for standard and Connectamajig seatpost hose connection types. The standard hose barb is pictured.

### NOTICE

Use Reverb Vise Blocks to prevent damage to the seatpost or any seatpost component when clamping it into a vise. Clamp each component only tight enough to prevent it from spinning in the vise blocks. To prevent the part from slipping, clean the vise blocks with a clean shop towel before use.

- 1 Clamp the lower post into a bench vise with Reverb Vise Blocks.



- 2 Unthread the lock ring from the lower post.



- 3 Push the upper post up.



- 4** Remove the lock ring from the poppet cover.



- 5** Unthread the seatpost collar.  
Slide the collar down toward the post head.



- 6** Remove the upper post assembly and set it aside on a clean shop towel.  
Remove the lower post from the vise.



- 7 Clean the inside and outside of the lower post, then set it aside.



- 8 Clamp the upper post head into the vise with Reverb Vise Blocks.



Remove the three brass keys from the upper post.

Record the number of lines, which indicate key size, marked on the brass keys for [future reference](#). If [worn](#), the brass keys must be replaced with new brass keys of the same size.

Clean the upper post and keys with a clean shop towel.



To continue with the **50 Hour Service** proceed to [Brass Keys Installation](#).

To continue with the **200 Hour Service** proceed to [Top Cap and Sealhead Bushing Replacement](#).

To continue with the **600 Hour Service** proceed to [Inner Shaft Disassembly](#).

The following steps are to be completed during the 200 hour service interval and include replacing parts included in the **Reverb Stealth C1 Service Kit - 200 hours**. These steps do not require complete disassembly of the upper post assembly and are not included in the 600 hour service.

Depressurization of the seatpost is not required prior to beginning the 200 hour service procedure.

- 1 Remove the foam ring from the inner shaft assembly and discard the foam ring.



- 2 Wrap a clean shop towel around the inner shaft at the sealhead. The towel will protect the inner shaft.



Spread the sealhead bushing and remove it from the sealhead. Remove the bushing and discard it.

Remove the towel.

#### NOTICE

The sealhead bushing may have sharp edges. Do not scratch the inner shaft with the bushing. Scratches will cause leaks.




Retaining ring pliers

- 3 Remove the sealhead o-ring. Pinch the o-ring, lift it from the o-ring groove, and remove it. Discard the o-ring.



Non-metallic pick

- 4** Remove the collar assembly from the upper post.  
Clean the upper post, inner shaft assembly, and the collar assembly.

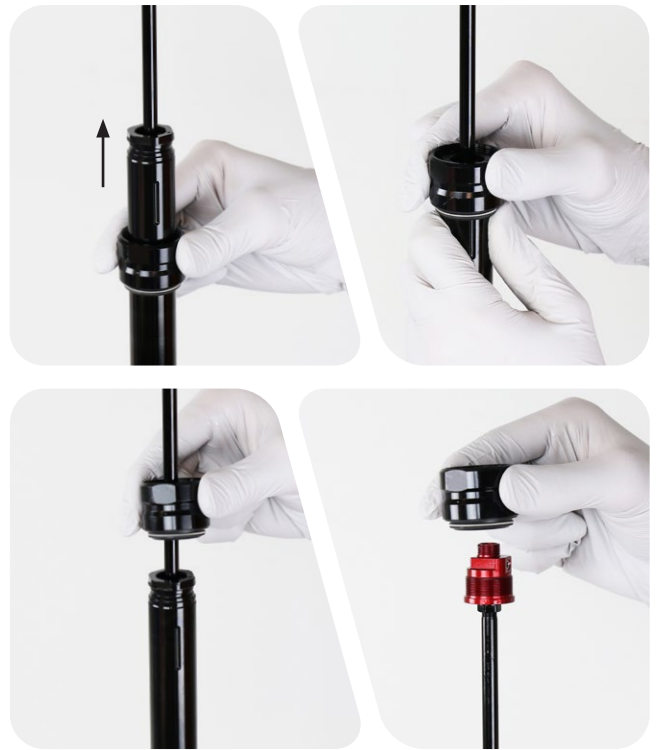

- 5** Apply a liberal amount of RockShox Dynamic Seal Grease around the inside of the collar assembly and onto the seals.

Carefully, install the collar assembly, dust wiper seal end first, over the sealhead and onto the upper post assembly. Slide the collar down until it is positioned below the upper post key slots.

#### **NOTICE**

Ensure the dust wiper seal slides over the sealhead without folding the outer lip of the seal.

Use care when installing the collar to avoid damage to the wiper seal or bushing which can be caused by forceful contact with the sealhead edges.



- 6 Install a new o-ring onto the sealhead.




- 7 Wrap a clean shop towel around the inner shaft at the poppet housing. Carefully spread the bushing ends enough to fit over the poppet housing.

Position the new bushing over the poppet housing and around the towel. Slide the towel and bushing down to the sealhead. The towel will protect the inner shaft.

Remove the towel.

#### NOTICE

The sealhead bushing may have sharp edges. Do not scratch the inner shaft with the bushing. Scratches may cause leaks.

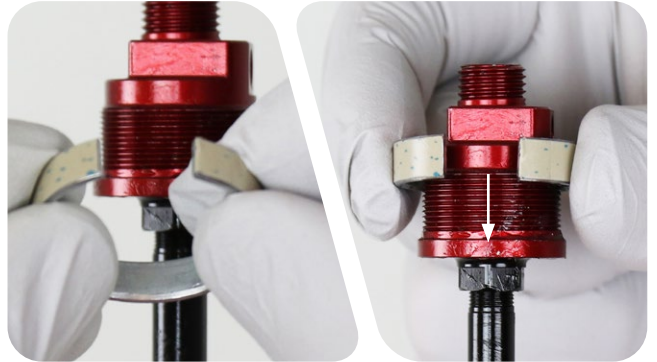

Pinch the bushing to secure it around the sealhead and o-ring.



- 8 Install a new foam ring.

**NOTICE**

Do not damage the foam ring during installation.




To continue with the **200 Hour Service** proceed to [Brass Key Installation](#).

**⚠ WARNING - EYE HAZARD**

The seatpost must be depressurized before disassembly. During disassembly, there may be remaining air pressure inside the upper post assembly. Keep your eyes and face away from the poppet valve housing during disassembly. Wear safety glasses.

- 1** Remove the air cap.

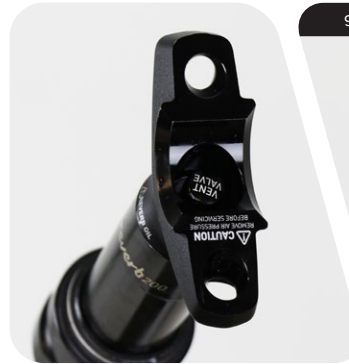


- 2** Depress the Schrader valve and release all air pressure from the air chamber. Remove the Schrader valve and set it aside.

**⚠ WARNING - PRESSURIZED DEVICE**

Always wear certified safety glasses (ANSI Z87.1, EN166 EU).

Verify all pressure is removed from the seatpost before proceeding. Failure to do so can cause the inner sealhead and inner shaft to separate from the upper post assembly at high velocity during disassembly. Wear safety glasses.

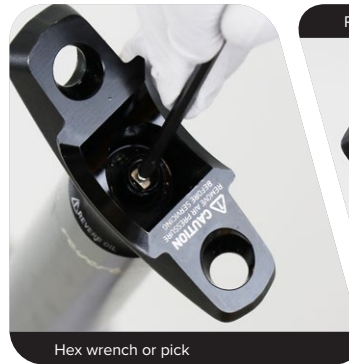

- 3** Clamp the poppet valve housing (black) 10 mm wrench flats in the Reverb Vise Blocks (flat) just tight enough to hold it secure. Loosen and break the poppet valve cover (red) free from the poppet valve housing (black); do not unthread or remove the poppet valve cover (red).

Remove the seatpost from the vise.

**NOTICE**

To avoid damage to the inner shaft, do not clamp the round section of the inner shaft into the flat section of the Reverb Vise Blocks. Only clamp the wrench flats in the flat section of the Reverb Vise Blocks.



- 4** Clean the inner shaft and Reverb Vise Blocks with RockShox Suspension Cleaner and remove any grease or oil.

Clamp the inner shaft in the Reverb Vise Blocks (7.5 mm slot), nearest the end of the shaft, tight enough so it does not spin when the poppet valve housing is unthreaded from the inner shaft.

Unthread the poppet valve housing (black) from the inner shaft and rotate it one half rotation. Do **NOT** remove the poppet valve housing.

**⚠ WARNING - PRESSURIZED DEVICE**

The poppet valve may still be pressurized. The poppet valve housing cover must remain threaded onto the poppet valve housing to prevent the poppet valve from ejecting from the inner shaft.



- 5** The poppet valve may still be pressurized. If pressurized, the poppet valve assembly could eject rapidly from the inner shaft during removal.

Wrap a shop towel around the inner shaft to absorb oil when the poppet valve is removed.

Cover the poppet valve cover (red) with a cloth shop towel and one hand.

**⚠ WARNING - PRESSURIZED DEVICE**

Always wear certified safety glasses (ANSI Z87.1, EN166 EU).

When performing service on a suspension product, keep your eyes, face, and body away from any part or lubricant that can suddenly eject under high pressure. DO NOT direct any pressurized suspension part at a person.

In the event the inner shaft and poppet valve assembly are still pressurized, cover the poppet valve cover with a shop towel and one hand to prevent the poppet valve assembly from ejecting from the inner shaft during removal.

With one hand on top of the shop towel and the poppet valve housing cover, slowly unthread the poppet valve housing (red) from the inner shaft.

The inner shaft and poppet valve will depressurize completely when both poppet valve o-rings exit the inner shaft. Slowly remove the poppet valve assembly from the inner shaft and set it aside.

**NOTICE**

Do not bend the poppet valve during removal. If the poppet valve is damaged it cannot be used.



- 6** Unthread and remove the poppet valve cover (red) from the poppet valve housing (black).



- 7** Remove the poppet valve from the poppet valve housing (black).





- 8** Clean the inner shaft threads. Clean the poppet valve housing (black) and the poppet valve cover (red).

With the inner shaft clamped in the Reverb vise blocks (7.5 mm slot) nearest to the end of the shaft, thread the poppet valve housing onto the inner shaft and tighten it to the specified torque.

**⚠ WARNING - CRASH HAZARD**


Parts must be tightened to the specified torque. Failure to do so can result in **SERIOUS INJURY OR DEATH**.

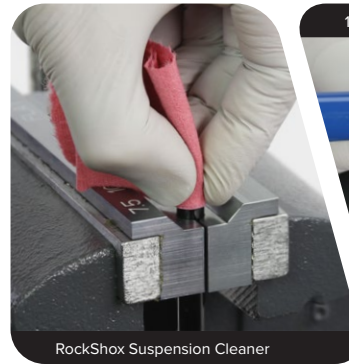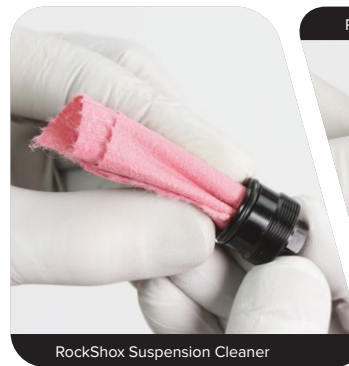

- 9** Remove the upper post assembly from the vise.  
Clamp the seapost head into the vise with Reverb Vise Blocks.



- 10** Unthread the internal sealhead three full turns. Do not remove the sealhead.

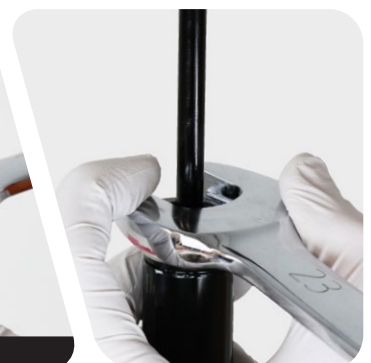

**11** Wrap a shop towel around and over the internal sealhead.

Slowly unthread the sealhead by hand while holding the shop towel over the sealhead.

A small amount of air pressure may be released when the sealhead is completely unthreaded. Do not remove the shop towel from the sealhead until the sealhead is completely unthreaded.

Wrap the shop towel around the upper post to absorb hydraulic fluid and carefully remove the sealhead and inner shaft assembly from the upper post.

Set the assembly aside on a clean shop towel.

**⚠ WARNING - EYE HAZARD**

In the event there is any remaining air pressure inside the upper post assembly, the shop towel will absorb any fluid that may be released under pressure. Do not remove the shop towel until the sealhead is completely removed from the upper post.



**12** Remove the upper post from the vise and pour the hydraulic fluid into an oil pan or container.

Set the upper post aside on a clean shop towel.



**13** Wipe the inner shaft and Reverb Vise Blocks with a clean shop towel. The clamping surfaces must be clean.



Clamp the inner shaft into the Reverb Vise Blocks with the main piston up.

Remove the main piston from the inner shaft.



**14** Remove the internal sealhead assembly from the inner shaft and discard the sealhead.

Remove the foam ring and discard it.

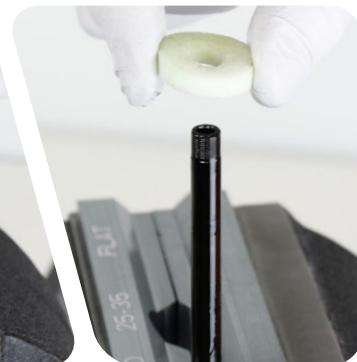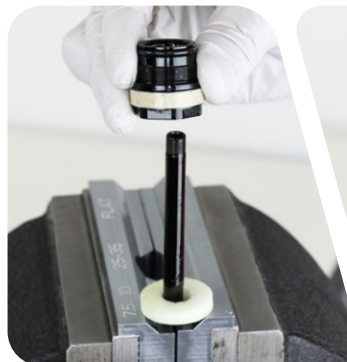

**15** Remove the inner shaft from the vise and set it aside on a clean shop towel.



- 1 Clamp the seapost head into the vise with Reverb Vise Blocks.  
Remove the collar from the upper post and discard it.




- 2 Insert a non-metallic pick into one of the cross holes in the IFP tube.  
Carefully pull the IFP tube out of the upper post and remove it from the post. Use your hand to guide the IFP tube straight out of the upper post using care not to scratch the inside of the upper post with the hex wrench.

Wipe the outer surface of the IFP tube and set it aside on a clean shop towel.

#### NOTICE

Do not scratch the inner surface of the upper post or the outer surface of the IFP tube. Surface scratches can cause leaks and reduce performance.

If the IFP tube is scratched, it must be replaced.


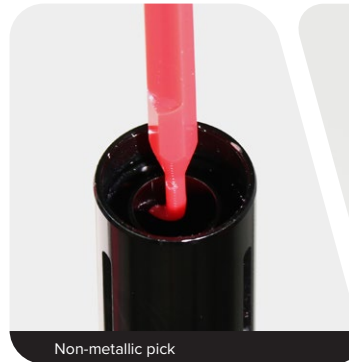


- 3** Remove the internal floating piston (IFP) from the upper post. Insert seven to nine plastic cable ties (cable tie size may vary), one at a time, into the upper post and through the center of the IFP.

Pull the cable ties out of the upper post and remove the IFP.

**Optional:** Use the hooked end of the non-metallic pick to remove the IFP.

**Discard the IFP.**

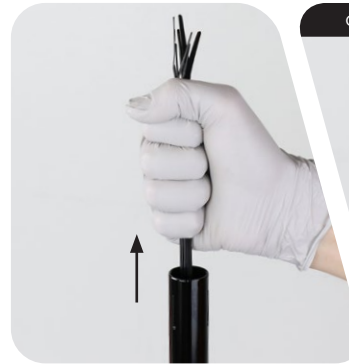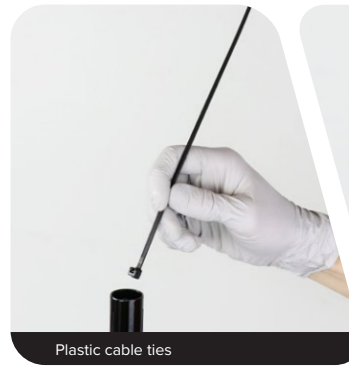

- 1 Apply a liberal amount of RockShox Dynamic Seal Grease around the inside of a new collar and onto the seals.



- 2 Wipe the outside of the upper post with a clean shop towel.  
Install the new collar, dust wiper seal end first, onto the upper post. Slide the collar down until it is positioned below the brass key slots.

**NOTICE**

Ensure the dust wiper seal slides over the upper post without folding the outer lip of the seal.




- 1** Install the Schrader valve and tighten it finger tight.



- 2** Pull the Vent Valve out to full extension to close the valve. Thread a shock pump onto the air valve and pull the valve out until it stops. Remove the shock pump.

### NOTICE

To ensure proper function, the Vent Valve must be closed before IFP installation.

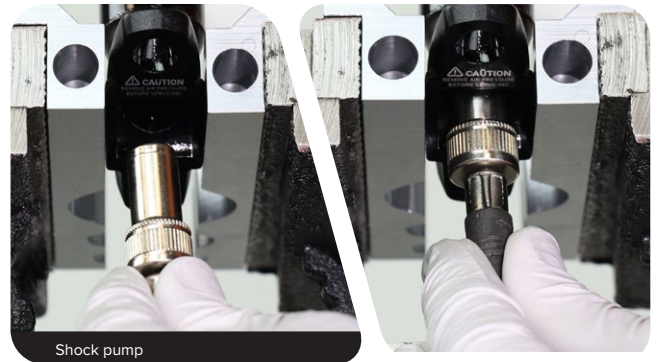

- 3** Fully coat the inside and outside surfaces of the IFP tube with seatpost hydraulic fluid.

Install the IFP tube with the cross holes facing up, into the upper post. Use your finger to rotate the IFP tube in a circular and side to side motion until the IFP tube seats itself onto the seal inside the bottom of the upper post.

Push down firmly on the IFP tube until it snaps securely into the upper post. When the IFP tube snaps into place, a click will be heard. Ensure the IFP tube is secured and centered.

### NOTICE

Do not scratch the inside of the upper post with the IFP tube. Do not scratch the outside of the IFP tube on the edge of the upper post. Scratches can cause leaks.

The IFP tube should be below the top of the upper post when it is installed correctly.



- 4 Apply a very liberal amount of RockShox Dynamic Seal Grease to the outer and inner surfaces of the new gray C1 IFP, then submerge the IFP in seatpost hydraulic fluid.

#### NOTICE

Install only the new gray C1 IFP.

The outer and inner surfaces must be coated with grease and seatpost hydraulic fluid to prevent stiction. Stiction will negatively affect seatpost function.



RockShox Dynamic Seal Grease



Maxima Serene Hydraulic Seatpost Fluid

- 5 Install the greased IFP into the upper post and onto the IFP tube. Gently and evenly push the IFP down until it is level with the top of the IFP tube.

*The IFP is symmetrical. Orientation of the IFP is not critical to installation.*




## 6 Internal floating piston (IFP) height:

Identify the IFP height (H) measurement on the IFP tool.

Reverb Stealth C1 Travel (mm)	Seatpost Length (mm)	IFP Height (H) (mm)
100	296	55
125	346	
150	409	
175	462	
200	514.5	

**IFP height is critical to proper function.**

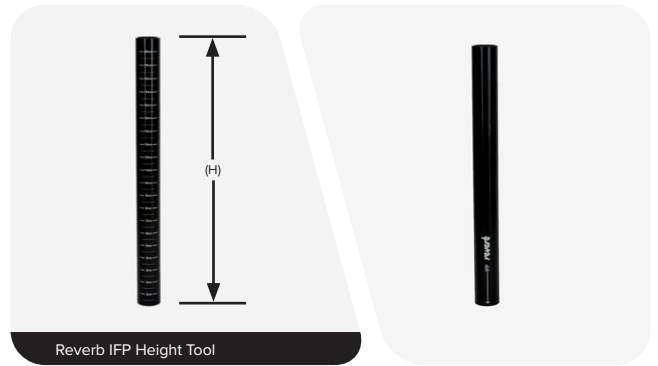

## 7 Set the internal floating piston (IFP) height inside the upper post.

Position the Reverb IFP height tool flat on the IFP. Gently tap the top of the tool with a plastic screwdriver handle to push the IFP down into the upper post.



Stop when the correct measurement on the IFP tool is level with the top of the upper post.

Remove the IFP tool from the upper post.

Remove the upper post assembly from the vise and set it aside on a clean shop towel.



**NOTICE**

Inspect each part for scratches. Do not scratch any sealing surfaces when servicing your suspension. Scratches can cause leaks.

When replacing o-rings, use your fingers or a non-metallic pick to remove the o-ring. Clean each part with a clean lint-free shop towel.

Apply RockShox Dynamic Seal Grease to Reverb seals and o-rings.



- 1** Clean the inner shaft and Reverb Vise Blocks with a clean shop towel. The clamping surfaces must be clean.

Clamp the inner shaft into the Reverb Vise Blocks, poppet housing down.



- 2** Install a new foam ring onto the inner shaft.




- 3** Apply a liberal amount of RockShox Dynamic Seal Grease to the inside of a new internal sealhead assembly.

Install the internal sealhead assembly onto the inner shaft, hex end (A) first.

Slide the internal sealhead below the shaft end.

**NOTICE**

If the sealhead is installed onto the shaft in either the correct orientation and removed, or the incorrect orientation and removed, the internal oil seal will become permanently damaged from the shaft threads and it cannot be used. If the new sealhead is installed and removed, the sealhead must be discarded and a new sealhead must be installed in the correct orientation.

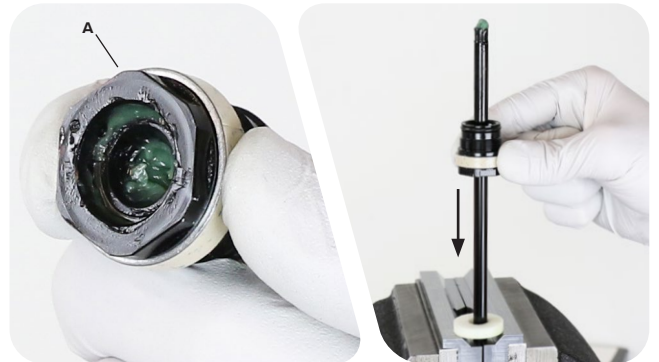

- 4 Thread the main piston onto the inner shaft by hand.  
Tighten the main piston to the specified torque.

**⚠ WARNING - CRASH HAZARD**

Parts must be tightened to the specified torque. Failure to do so can result in **SERIOUS INJURY OR DEATH**.

**NOTICE**


Do not scratch the inner shaft with the wrench as this is a critical sealing surface. Surface scratches can cause leaks and reduce performance.



- 5 Remove the inner shaft assembly from the vise.  
Remove the main piston o-ring, and discard it.  
Apply RockShox Dynamic Seal Grease to the new main piston o-ring and install it.

**NOTICE**


Do not scratch any part of the main piston seal gland.

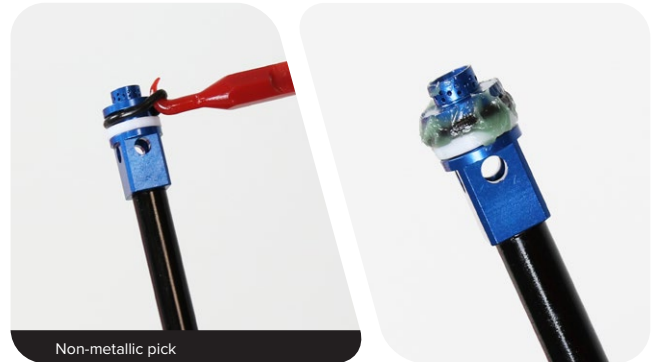

- 6 Slide the sealhead assembly toward the main piston until it stops.  
Set the inner shaft assembly aside on a clean shop towel.




- 1 Clamp the inner shaft into the Reverb Vise Blocks, poppet valve housing oriented up.

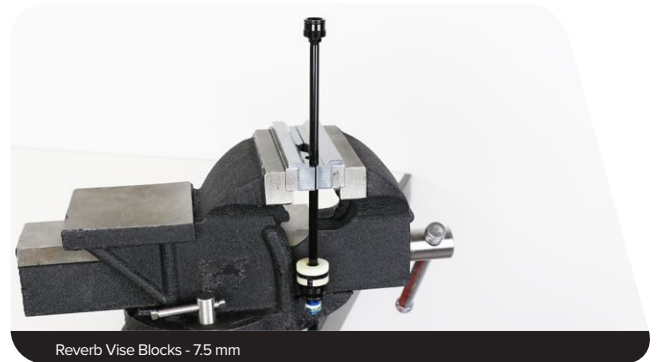


- 2 Clean the poppet valve and o-rings with a clean lint-free shop towel.



Remove and discard **only** the o-ring at the narrow end (A) of the poppet valve. Clean the o-ring gland with a clean lint-free shop towel. Install a new o-ring.

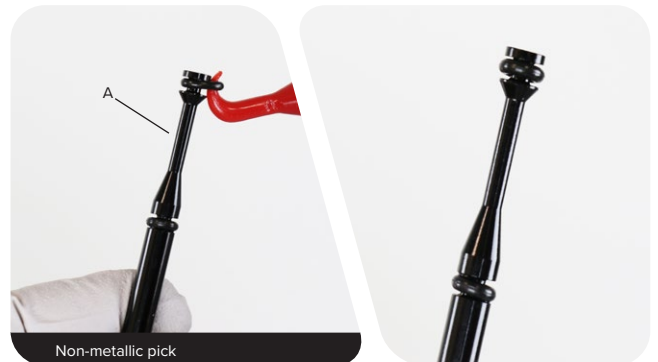

- 3 Coat each o-ring with seatpost hydraulic fluid.

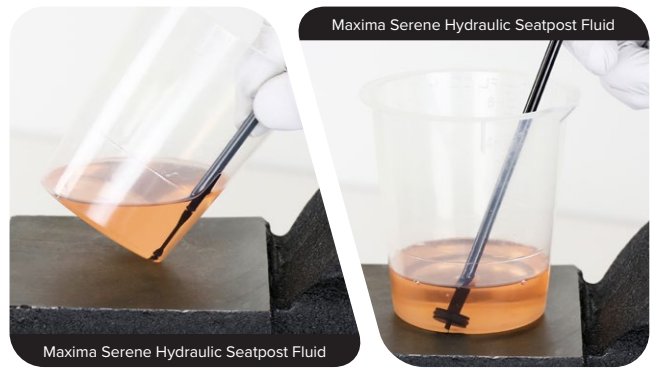

Wipe fluid from the poppet valve under the large o-ring.

**NOTICE**

Allow excess fluid to drip off poppet valve before installation.  
Excessive fluid coating may decrease performance.



- 4 Insert the poppet valve into the inner shaft, narrow end first.



Push the poppet valve into the poppet valve housing until the large o-ring is 4 mm above the top edge of the poppet valve housing.

**NOTICE**


Do not bend the poppet valve during installation. If the poppet valve is damaged it cannot be used.

Remove the inner shaft assembly from the vise and set it aside on a clean shop towel.



**1** Clamp the upper post head back into the Reverb Vise Blocks.

Wrap a shop towel around the top of the upper post. Pour seatpost hydraulic fluid into the IFP tube until the fluid overflows into the upper post and is level with the top of the upper post.

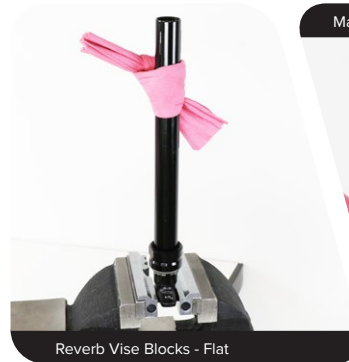

Maxima Serene Hydraulic Seatpost Fluid



Use your finger to remove any bubbles from the surface of the fluid if bubbles are visible.

**2** Hold the inner shaft and press the sealhead against the main piston with your thumb. Insert the main piston into the fluid and IFP tube.

- 3 Push the sealhead into the upper post and thread the sealhead into the upper post by hand.



The poppet valve may move slightly up in the poppet valve housing during sealhead installation. If this occurs, carefully push the poppet valve back into the poppet valve housing, without moving the inner shaft, and stop when the large o-ring is 4 mm above the top edge of the poppet housing.

#### NOTICE

Do not compress the inner shaft into the upper post and IFP tube until the seatpost is completely assembled and pressurized. If the inner shaft does get pressed into the IFP tube, the IFP [removal](#) and [installation](#) procedures must be repeated.



- 4 Tighten the sealhead to the specified torque.

#### ⚠ WARNING - CRASH HAZARD

Parts must be tightened to the specified torque. Failure to do so can result in SERIOUS INJURY OR DEATH.



- 5 Push the poppet valve into the poppet housing until the large o-ring engages the housing and the top of the poppet valve is flush with the top of the housing.

The poppet valve may extend from the housing due to internal hydraulic pressure. If this occurs, gently push it back into the housing.

#### NOTICE

Do not scratch the inner shaft with the wrench as this is a critical sealing surface. Surface scratches can cause leaks and reduce performance.


Do not compress the inner shaft into the upper post and IFP tube until the seatpost is completely assembled and pressurized. If the inner shaft does get pressed into the IFP tube, the IFP [removal](#) and [installation](#) procedures must be repeated.



- 6** Remove the upper post assembly from the vise.  
Clamp the poppet housing wrench flats in the Reverb Vise Blocks.

**NOTICE**

To avoid damage to the inner shaft, do not clamp the inner shaft into the flat section of the Reverb Vise Blocks.

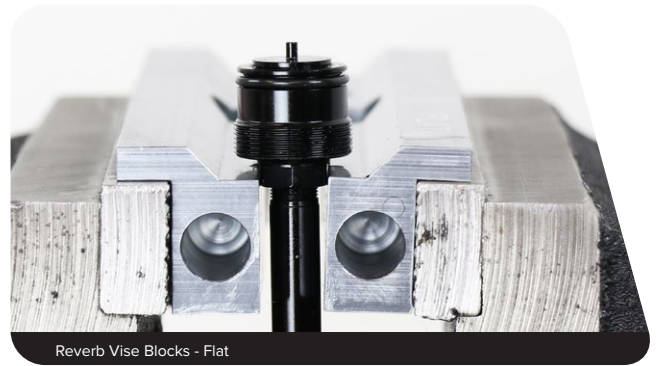

- 7** Install the poppet valve cover onto the poppet valve housing and thread it on by hand.  
Tighten the poppet valve cover onto the poppet valve housing to the specified torque.


**⚠ WARNING - CRASH HAZARD**

Parts must be tightened to the specified torque. Failure to do so can result in **SERIOUS INJURY OR DEATH**.

Remove the upper post assembly from the vise.



- 1 Clamp the upper post head into the vise with Reverb Vise Blocks.

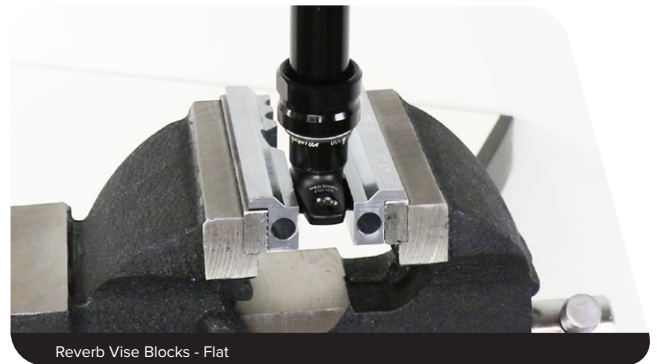

- 2 Apply a liberal amount of RockShox Dynamic Seal Grease onto the sealhead bushing.



- 3 Apply a liberal amount of RockShox Dynamic Seal Grease to the inside of the lower post tube and into the key grooves.



- 4 Install the lower post onto the upper post.  
Squeeze the sealhead bushing, and slide the lower post down over the sealhead bushing. Stop when the lower post covers the bushing.



**NOTICE**

Side-to-side movement of the upper tube is an indication that the brass keys are worn and need to be replaced. Vertical lines on the key are an indication that the key is worn.

New brass keys must be the same size and have the same number of [etched lines](#) as the original brass keys for proper function.

Refer to the RockShox spare parts catalog at [www.sram.com/service](http://www.sram.com/service) for a list of brass key kits available.



- 1 Apply a liberal amount of RockShox Dynamic Seal Grease onto each key slot.

Install the brass keys into the key slots. The orientation of the brass keys is not critical.

Apply a liberal amount of RockShox Dynamic Seal Grease onto the brass keys and upper post.


Slide the collar up and down to lubricate the upper post and the collar bushing and seal.




- 2** Align the lower post key slots with the brass keys and ensure the laser etched RockShox logo is aligned with the **back** of the seatpost head.

Hold each brass key in place and slide the lower post down until it engages the keys. Continue to slide the lower post down over the brass keys.

Slide the collar up until it contacts the lower post threads. Thread the collar onto the lower post by hand.

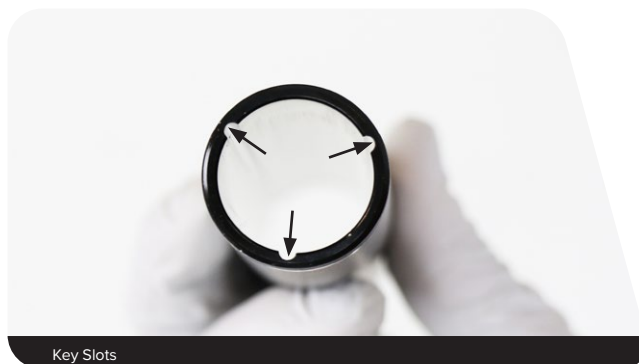

Key Slots

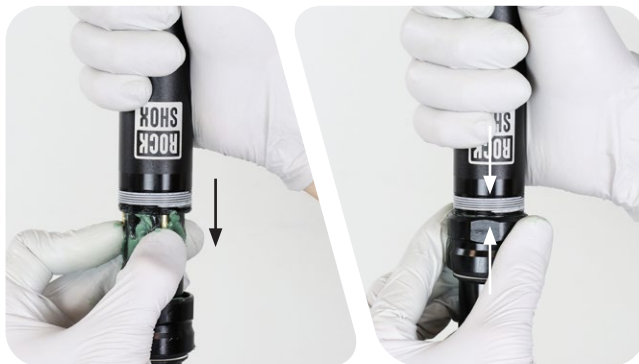

- 3** Tighten the collar.

**⚠ WARNING - CRASH HAZARD**

Parts must be tightened to the specified torque. Failure to do so can result in **SERIOUS INJURY OR DEATH**.

Remove the seatpost from the vise.

**NOTICE**

Do not scratch the upper post with the wrench. Scratches can allow contaminants to enter the lower tube, damage the upper post outer surface, and degrade performance.




34 mm

28 N·m (250 in-lb)

- 1** Clamp the lower post into the Reverb Vise Blocks with the post head oriented up.

Pressurize the seatpost to 300 psi (20.7 bar).

Reinstall the air cap finger tight.

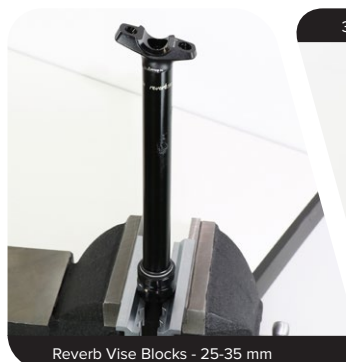

- 2** Remove the seatpost from the vise and clamp the lower post into the Reverb Vise Blocks with the post head oriented down.

Push the upper post up to expose the poppet valve housing.



- 3** Install the lock ring onto the poppet valve cover and thread it on by hand.


Tighten the lock ring onto the poppet valve cover to the specified torque.

#### **⚠ WARNING - CRASH HAZARD**

Parts must be tightened to the specified torque. Failure to do so can result in SERIOUS INJURY OR DEATH.

#### **NOTICE**

Do not scratch the inner shaft with the wrench as this is a critical sealing surface. Surface scratches can cause leaks and reduce performance.

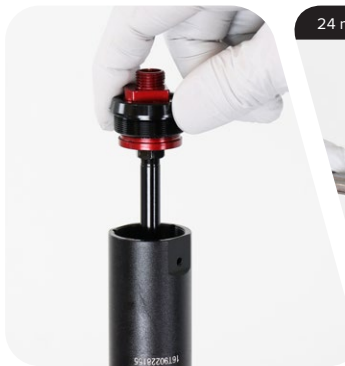

- 4 Pull the upper post down to full extension until the lock ring threads contact the lower post.

Thread the lock ring into the lower post and tighten it to the specified torque.

**⚠ WARNING - CRASH HAZARD**

Parts must be tightened to the specified torque. Failure to do so can result in SERIOUS INJURY OR DEATH.

Remove the seatpost from the vise.



- ⬛ To continue with the **50/200/600 Hour Service** proceed to [Connect to Seatpost](#).

## Remote Lever

### Hose Barb Replacement (OPTIONAL)


Replace the remote hose barb only if it is damaged from impact.

If the hydraulic hose assembly is removed from the bicycle, refer to the 'Reverb Stealth and Reverb Hydraulic Hose Replacement and Remote System Bleed' manual at [www.sram.com/service](http://www.sram.com/service) for installation procedures. For a list of available Reverb Stealth hydraulic hose kits, refer to the RockShox Spare Parts catalog at [www.sram.com/service](http://www.sram.com/service).

#### NOTICE

If Reverb hydraulic fluid leaks from the remote lever while under pressure or in use, the remote lever assembly must be replaced.

- 1 Hold the hydraulic hose near the hose barb. Rotate the Reverb remote lever counterclockwise and unthread the hose from the remote hose barb.

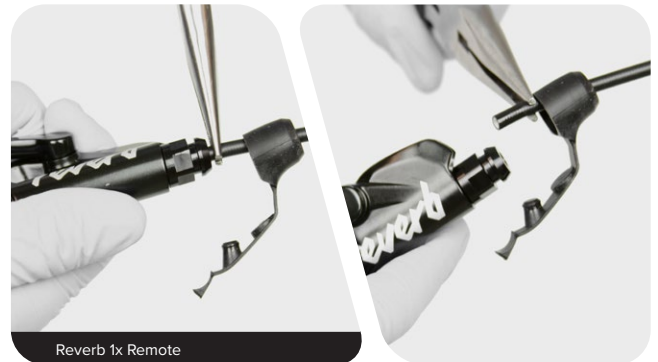

- 2a **Standard Remote:** Unthread the barb from the remote and discard it.



Install a **new** hose barb and tighten it.

#### **⚠ WARNING - CRASH HAZARD**

Parts must be tightened to the specified torque. Failure to do so can result in SERIOUS INJURY OR DEATH.



**2b****Reverb 1x Remote:** Remove the strain relief nut.

Remove the hose barb and discard it.

**3****3** Cut 3 - 4 mm off the end of the hose.**4a****Standard Remote:** Thread the remote lever hose barb into the hydraulic hose. Hold the end of the hose and rotate the remote lever clockwise while pushing the remote lever barb into the hose. Stop when the hose is hand tight on the hose barb.**NOTICE**

Do not over-tighten and strip the threads inside the hydraulic hose. If the hose is over or under tightened, hydraulic fluid can leak.



- 4b Reverb 1x Remote:** Insert the strain relief nut onto the hose.  
Thread a new hose barb into the hose until it contacts the barb flange.

**NOTICE**

Do not over-tighten and strip the threads inside the hydraulic hose. If the hose is over or under tightened, hydraulic fluid can leak.



- 4c Reverb 1x Remote:** Insert the hose barb into the remote and thread the strain relief nut onto the remote.



Tighten to the correct torque.

**⚠ WARNING - CRASH HAZARD**

Parts must be tightened to the specified torque. Failure to do so can result in SERIOUS INJURY OR DEATH.



*The Reverb remote hydraulic system must be bled after the hose is installed onto the remote lever. Refer to the 'Reverb Stealth and Reverb Hydraulic Hose Replacement and Remote System Bleed' manual, available at [www.sram.com/service](http://www.sram.com/service), for hydraulic remote system bleed and seatpost installation procedures.*

There are two Reverb Stealth C1 hydraulic hose connection types: 1) hose barb and barb strain relief nut and 2) Connectamajig. Follow the procedure in step 2 for the hose connection type on your Reverb Stealth C1.

- 1 Clamp the seatpost into a bicycle work stand. Position the bicycle under the seatpost. Place a shop towel under the seatpost and hose to absorb any hydraulic fluid that may drip.

Push the hydraulic hose into the frame hose port as needed.

### **⚠ WARNING**

Do not allow Reverb hydraulic fluid to come into contact with any brake components. Contaminated brake components can compromise brake performance, may cause brake failure, and can lead to serious injury and/or death.




- 2a **Hose Barb and Barb Strain Relief Nut:** Place the flat end of the hose barb into the recessed end of the poppet valve cover. Thread the strain relief nut onto the poppet valve cover and tighten it to the specified torque.


### **⚠ WARNING - CRASH HAZARD**

Parts must be tightened to the specified torque. Failure to do so can result in SERIOUS INJURY OR DEATH.

Remove the cable tie.

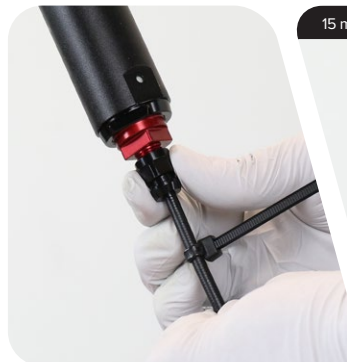

**2b Connectamajig:** Connect the hose coupler (A) to the Connectamajig coupler collar (B). Use your fingers to push the Connectamajig hose coupler firmly into the Connectamajig coupler collar until it stops; hold it in place.

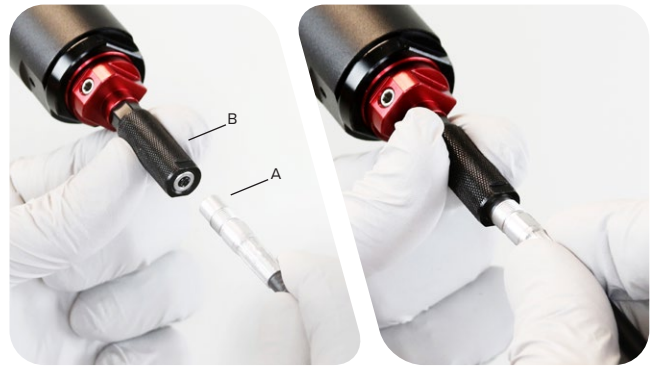

Thread the hose coupler into the Connectamajig coupler by turning the coupler collar clockwise.

Use a 6 mm open end wrench to hold the hose coupler and tighten the Connectamajig coupler collar to the specified torque.

**⚠ WARNING - CRASH HAZARD**

Parts must be tightened to the specified torque. Failure to do so can result in SERIOUS INJURY OR DEATH.



This concludes service for the RockShox Reverb Stealth C1 adjustable height seatpost.

The Reverb Stealth hydraulic remote system must be bled before the seatpost can be reinstalled and used. Refer to the *Reverb Stealth and Reverb Hydraulic Hose Replacement and Remote System Bleed* manual, available at [www.sram.com/service](http://www.sram.com/service), for bleed and seatpost installation procedures.



---

ASIAN HEADQUARTERS

SRAM Taiwan  
No. 1598-8 Chung Shan Road  
Shen Kang Hsiang, Taichung City  
Taiwan

WORLD HEADQUARTERS

SRAM, LLC  
1000 W. Fulton Market, 4th Floor  
Chicago, Illinois 60607  
U.S.A.

EUROPEAN HEADQUARTERS

SRAM Europe  
Paasbosweg 14-16  
3862ZS Nijkerk  
The Netherlands